



0048-0922

FVISION B

7/2/13

PAGE I

## RSD HEADLIGHT INSTALLATION

NOTE: Use blue Loctite on all fasteners during assembly.

- 1. Turn off motorcycle and place securely on a lift or on the sidestand.
- 2. Disconnect the battery.
- 3. Drain the fuel from the fuel tank and remove the fuel tank.
- 4. Locate the headlight wiring harness and disconnect the electrical plug.
- 5. Once the wiring harness is disconnected remove the factory headlight.
- 6. Install the RSD headlight onto the motorcycle using the supplied 3/8-16 X I-3/4" button head cap screw (4), washer (5), and 3/8" nylock nut (7).
- 7. Remove the wire harness plug from the factory headlight by either de-pinning the connector or cutting the wires (special tool is required for de-pinning). Take note of the wire color location in the harness plug for use when reinstalling. Once the harness plug is removed, install it onto the new headlight harness by soldering the wires or installing the corresponding pins back into the harness plug using the diagram below.

Note: Install heat shrink tubing around the wires for protection.

HD HEADLIGHT HARNESS PA			M HEADLIGH	Τ
	WHITE: HIGH BEAM		BLUE	
	YELLOW: LOW BEAM		WHITE	
	BLACK: GROUND	· 	GREEN	

- 8. Reconnect the battery and test both the high and low beams.
- 9. Reinstall the fuel tank.
- 10. Place the motorcycle on flat ground and adjust the headlight angle using the following steps:
- II. Place the motorcycle 25ft away facing a wall or garage door.
- 12. Measure from the center of the headlight to the ground using a tape measure.
- 13. Mark a line on the wall or garage door using masking tape at the same height as the headlight and place another piece of tape 2 inches below.
- 14. Mount the motorcycle and switch the headlight on. Adjust the headlight angle until the low beam's upper cutoff point rests on the lower tape line.
- 15. Because the high and low beams use the same reflector the angle is set and you are ready to ride.



_		
	PRODUCT DESCRIPTION	
	RSD CHRONO 5-3/4" HEADLIGHT	0207-2006CRN
	RSD TRACKER 5-3/4" HEADLIGHT	7 0207-2006TRA
	RSD VINTAGE 5-3/4" HEADLIGHT	0207-2006VIN
	RSD NOSTALGIA 5-3/4" HEADLIGHT	0207-2007


For questions pertaining to the installation of this product, please contact the Performance Machine technical department at 1-800-479-4037. This product is manufactured in the USA by Performance Machine LLC.



## **ROLAND SANDS DESIGN**

## **ASSEMBLY INSTRUCTIONS**

## **RSD HEADLIGHT**

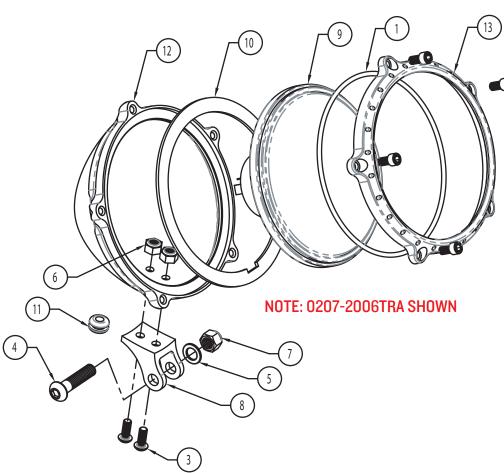

item No.	DESCRIPTION	QTY.
1	ORING BUNA-N DASH 255	1
2	SHCS 1/4-20 X .50	5
3	BHCS 1/4-20 X 5/8, 18-8 STAINLESS STEEL	2
4	BHCS 3/8-16 X 1-3/4 CHROME	1
5	WASHER, .406 X .680 X .06	1
6	NUT 1/4-20 ELASTIC LOCK, ZINC PLATE	2
7	NUT 3/8-16 ELASTIC LOCK, CHROME	1
8	MOUNT, HEADLIGHT	1
9	5-3/4 HEADLAMP ASSEMBLY, JUTE A140-US	1
10	RUBBER GASKET, HEADLIGHT	1
11	GROMMET, 17/64 ID X 3/8 THK	1
12	RSD HEADLIGHT HOUSING	1
13	RSD TRACKER HEADLIGHT, BEZEL	1

For questions pertaining to the installation of this product, please contact the Performance Machine technical department at 1-800-479-4037. This product is manufactured in the USA by Performance Machine LLC.