

# SECONDARY / FUEL MODULE



## PARTS LIST

- 1 Secondary Fuel Module
- 1 CAN cable
- 1 CAN termination plug
- 1 Installation Guide
- 2 Velcro
- 1 Alcohol swab
- 1 CD

**2005-2006 Kawasaki ZX-6R**

**Installation Instructions**

**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**


**Dynojet**

2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 [www.powercommander.com](http://www.powercommander.com)

**FIG.A**



**FIG.B**

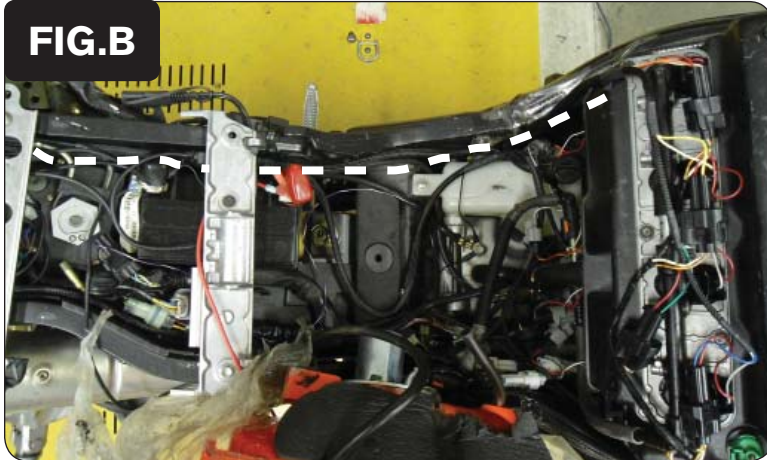


**FIG.C**



- 1 Remove the main seat and the passenger seat.
- 2 Remove the fuel tank cover.
- 3 Lift the fuel tank up or remove.
- 4 Using the supplied velcro, secure the SFM in the tail section next to the PCV. Make sure to clean both surfaces with the alcohol swab before attaching.
- 5 Plug the CAN cable into 1 of the ports of the SFM and the other end into 1 of the ports of the PCV.
- 6 Plug the CAN termination plug (plastic) into any one of the remaining open ports of the SFM or PCV.
- 7 Route the SFM harness down the left side and toward the front of the bike as shown in Figure B.
- 8 Unplug the stock wiring harness from the UPPER injectors.
- 9 Attach the connectors from the SFM harness to each upper injector and to the stock connector as shown in Figure C.  
  
ORANGE - cylinder #1  
YELLOW - cylinder #2  
GREEN - cylinder #3  
BLUE - cylinder #4


**FIG.D**

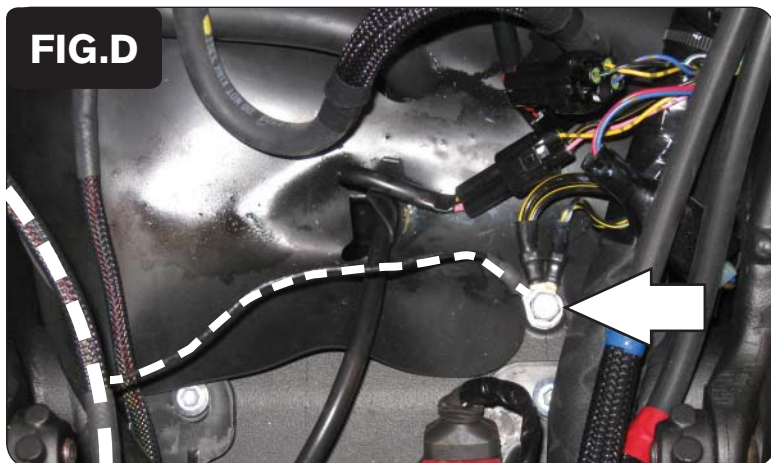

- 10 Attach the ground wire from the SFM to the stock common ground location underneath the fuel tank.
- 11 Reinstall fuel tank and bodywork.

**PCV**

**SFM**

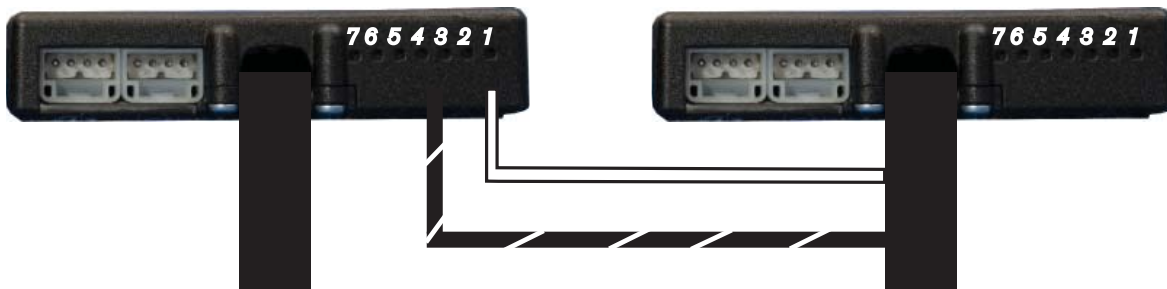

#### **Connecting the SFM to the PCV**

- 1 Insert the white wire from the SFM into the #1 input position on the PCV.
- 2 Insert the black/white wire from the SFM into the #4 or #6 input position of the PCV.
- 3 Plug the CAN cable into one of the ports of the SFM and the other end into one of the ports on the PCV.
- 4 Plug the CAN termination plug (plastic) into any one of the remaining open ports of the SFM or PCV.

#### **Adding the SFM to the PCV Network**

- 1 Verify you are using the latest version of Control Center Software (version 1.0.6.4 or newer). The latest version of software (and firmware) can be found on the downloads page of [www.powercommander.com](http://www.powercommander.com) or on the included CD.
- 2 Using the Control Center Software, verify you are using firmware version 0.1.10.5 or newer in the PCV. Click View > Device Information to view the current version.
- 3 Connect a USB cable to the PCV and another USB cable to the SFM.
- 4 Click Power Commander Tools > Manage Network and click on Sync Devices Utility. Follow the on screen instructions.

SFM Basic Mode (default setting): one fuel table controls the lower and upper set of injectors simultaneously.

SFM Advanced Mode: two separate fuel tables, one fuel table for the lower injectors and another for the upper injectors.