

SECONDARY / FUEL MODULE



PARTS LIST

- 1 Secondary Fuel Module
- 1 CAN link cable
- 1 CAN termination plug
- 1 Installation Guide
- 2 Velcro strips
- 1 Alcohol swab



2005-2006 Suzuki GSXR1000

Installation Instructions

PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

Dynojet

2191 Mendenhall Drive North Las Vegas, NV 89081 (800) 992-4993 www.powercommander.com

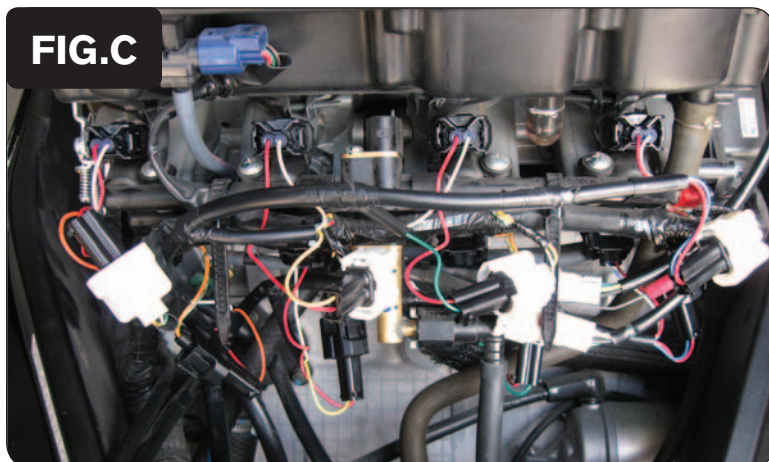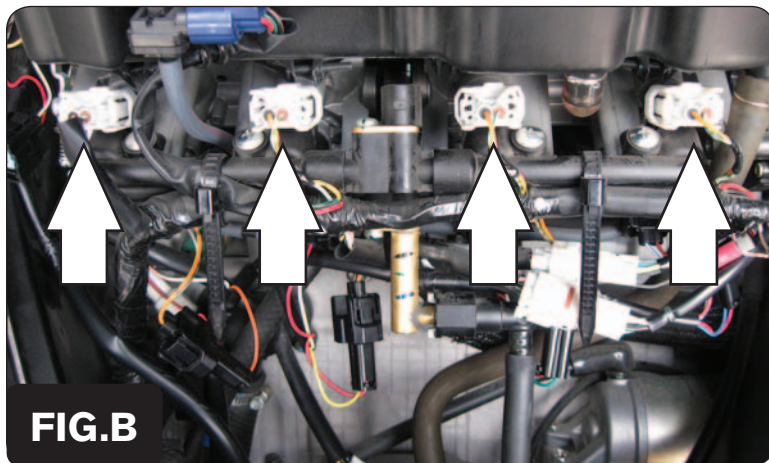

- 1 Remove the main seat and the passenger seat.
- 2 Remove the fuel tank cover.
- 3 Lift the fuel tank up or remove.
- 4 Mount the SFM in the tail section next to the PCV using the supplied velcro. Make sure to clean both surfaces with the alcohol swab before attaching.
- 5 Plug the CAN cable into 1 of the ports of the SFM and the other end into 1 of the ports of the PCV.
- 6 Plug the CAN termination plug (plastic) into any one of the remaining open ports of the SFM or PCV. Route the SFM harness down the left side of the bike.

- 7 Route the SFM harness down the left side of the bike.
- 8 Unplug the stock wiring harness from the UPPER injectors (Fig. B).

These are the WHITE connectors closest to the air box.

- 9 Plug the SFM harness in-line of the stock wiring harness and each injector (Fig. C).

SFM harness:


ORANGE - cylinder #1

YELLOW - cylinder #2

GREEN - cylinder #3

BLUE - cylinder #4

FIG.D

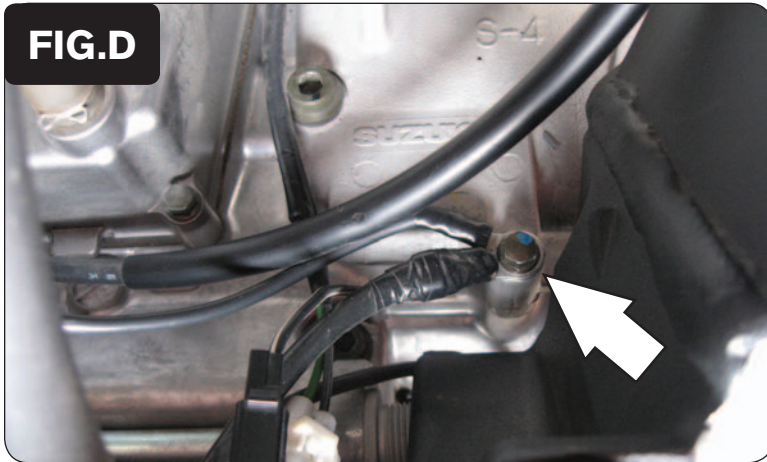

- 10 Secure the ground wire of the SFM to this bolt on the back right side of the engine case (Fig. D).

This is the same bolt that the battery's ground wire is secured to.

- 11 Reinstall fuel tank and bodywork.

There are two wires coming out of the SFM harness (near the enclosure). The BLACK/WHITE wire will need to be connected to the PC5 module. It needs to be clamped into either wire input hole #4 or #6 (from the outside edge of the module).

The WHITE wire would only be used in conjunction with an Ignition Module. Refer to the instructions of the Ignition Module for connecting this wire (if applicable).

IMPORTANT NOTICE

The SFM and your PCV may need to be updated. The PCV and SFM need to both have the same firmware loaded and the most up to date version available (at least 0.1.10.6 or higher) installed. To install this firmware you also need to be using the latest PC5 software version (1.0.6.4 or higher). The latest software and firmware can be found at: http://www.powercommander.com/powercommander/Downloads/powercommander_downloads.aspx?ProdType=PCV

To update your firmware go to Power Commander Tools - Update Firmware. Click on the unit you wish to update (PCV Primary Module or Secondary Fuel Module) and then click on Update. This will bring up a window so that you can search the computer to find and open the firmware file. Open the file from the location on the computer where it has been saved.

The SFM needs to be added to the PCV network. To do so connect a USB cable to the PCV and another USB cable to the SFM. Open the PCV control center software and it will add the SFM to the network. You are now able to use the SFM.

The SFM is shipped in BASIC mode. This means that you will have 1 Fuel table in the software. This fuel table controls the lower set of injectors and upper set of injectors simultaneously. Whatever value is entered in a cell will automatically be put into the corresponding cell for the upper injectors.

If you put the SFM in ADVANCED mode you will have 2 Fuel tables. This allows a separate fuel table for the upper injectors, if desired.

On GSXR models if you leave the bike in BASIC mode the maps from the website will NOT run properly. It is recommended to bring your bike to an Authorized Tuning Center.

