



4130 PRODUCT DRIVE, CAMERON PARK, CA 95682  
VIEW INSTALLATION VIDEO AT [www.worksconnection.com/AirForkEZFill/](http://www.worksconnection.com/AirForkEZFill/)

## 26-360, 26-362 AIR FORK EZ FILL INSTALLATION INSTRUCTIONS

We at Works Connection Inc. appreciate your purchase of our Fork EZ Fill for your motorcycle.  
**If you have any problems or questions regarding this item, please contact us at 1.530.642.9488**

Whenever you see symbols, heed their instructions! Always follow safe operating and maintenance practices.

### WARNING

**WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury.

### CAUTION

**CAUTION** indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

### WARNING

Installing these parts improperly can cause a crash, serious injury or death.

**Before you start:**

**Read these instructions and if you are not sure that you can follow the instructions, have this product installed by a professional mechanic.**

### TOOLS & SUPPLIES REQUIRED: (not supplied)

- Torque wrench
- 5mm Allen T-Handle
- 10mm socket T-Handle

### CAUTION

Before you begin working, be sure you are wearing eye protection and gloves.

The internal O-rings in the Air Fork EZ Fill are assembled with a PTFE based lubricant. Avoid contact of the lubricant with your skin, eyes or clothing. First Aid-Wash affected area with soap and water. For eyes rinse with water.

## INSTALLATION of AIR FORK EZ FILL

1. Place motorcycle on a suitable stand with front wheel off the ground.
2. Remove the front number plate.

### WARNING

**Air forks are pressurized and are required to have the air pressure released to avoid injury.**

3. Release air pressure from the forks  
***Steps 4 thru 8-Perform the following instructions for each fork***
4. Clean fork cap and recessed area surrounding the OE brass Schrader assembly.
5. Confirm air pressure has been released and then remove the OE brass Schrader assembly.
6. Place nylon washer over recess in fork cap.
7. Insert the Air Fork EZ Fill through the nylon washer and carefully thread the unit in until you feel it seat in the fork cap. **AVOID CROSS-THREADING and DO NOT FORCE.**
8. Tighten until SNUG. **DO NOT OVERTIGHTEN! Maximum-50 inch/pounds (4 foot/pounds).**
9. Reinstall number plate and check for cable interference to Air Fork EZ Fill.
10. Refill forks with air and adjust pressure to recommended PSI.

**NOTE-Keep your OEM brass Schrader assemblies and reinstall if you ever remove fork(s) from motorcycle.**



### **FOR ACCURATE AND RELIABLE AIR PRESSURE ADJUSTMENT TRY OUR DIGITAL SHOCK PUMP PN 26-350 RETAIL \$69.95**

- 0.5 psi increments below 100 psi, 1.0psi over 100 psi
- Micro-adjust air bleed button
- 0-300 PSI / 0-20.69 BAR operating range
- Large LCD screen
- PSI - BAR - KG/CM2 pressure scales
- 360 degree rotating hose with swivel head
- Fits all Schrader valve equipped forks and shocks
- Auto start and shut-off
- Replaceable battery (CR2032)
- 6063 Aluminum pump barrel