

INSTALLING FACE SHIELD ON LANE SPLITTER HELMET

Time Estimate: 5-10 minutes

Note: New baseplates are provided with all shields, so no matter which Biltwell shield you purchase, it will safely fasten to your Lane Splitter helmet.



Step 1

Remove the screws and washers from both sides of the shield



Step 2

Remove the plastic base plates from your shield and helmet



Step 3

Install new base plates provided with replacement face shield



Step 4

Install the washer on the outside of the shield, making sure the small nibs on the inside of washer engage with their corresponding slots on base plate



Step 5


Put a drop of blue Loc-Tite or similar medium strength thread locking compound on the threads of the screw. Snug screw down ensuring the nibs on the washer are still engaged on the baseplate.

DO NOT OVER-TIGHTEN



Questions?

Email us at service@biltwellinc.com or give us a call at 951-699-1500
M-F 9:00AM - 5:00PM PST

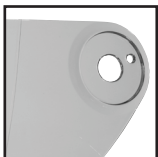

Gen 1
(1 hole)



Gen 2
(2 holes)

How to Identify Gen 1 and Gen 2 shields for Lane Splitter Helmets

Gen 1 and Gen 2 shields are easily identified by the number of holes located at the mounting point of the helmet. See photos to identify which shield you have. If the replacement Biltwell face shield you are preparing to install matches the shield you are removing from your helmet, you do not have to install the new baseplates provided with the new Biltwell face shield.