

KRAUS ADJUSTABLE ISO BAR

UN-HB-3334

NOTE: Bar end and knuckles have been pre-installed.
Seperating these components is discouraged.

- 1) Start by running the wires through the bar.
*De-pinning connectors and removing black OEM sheath are highly encouraged.
- 2) With controls installed, wires can be ran through the lower bar while simultaneously installing lower bar into the knuckle.
- 3) Tighten the 3 screws of knuckle lightly to keep knuckle from easily turning with remainder of installation.
- 4) With bars installed onto clamps, final positioning can be adjusted and tightened to spec **(See attached torque specs)**

