

# BMW S1000RR DIY WINDSCREEN INSTALL

## Installation Instructions for BMW S1000RR

Thank you for purchasing one of Zero Gravity's windscreen, which has been designed and manufactured to give years of safe & fun riding. These instructions give you an in-depth look at the installation process. To receive further assistance or parts please call Zero Gravity® Sales Department at 805-388-8803 or E-mail at [salesinfo@zerogravity-racing.com](mailto:salesinfo@zerogravity-racing.com).

**PLEASE READ BEFORE MOUNTING YOUR WINDSCREEN**


**Helpful hints:** Use metric tools, clean hands, put the bike on a stand. Do not pry on the screen excessively, as it can break without much warning.



**Fig 1.** Remove both mirrors. The fasteners are behind the fairing. Be careful not to drop the mirrors!



**Fig 2.** Remove all 8 fastener screws.

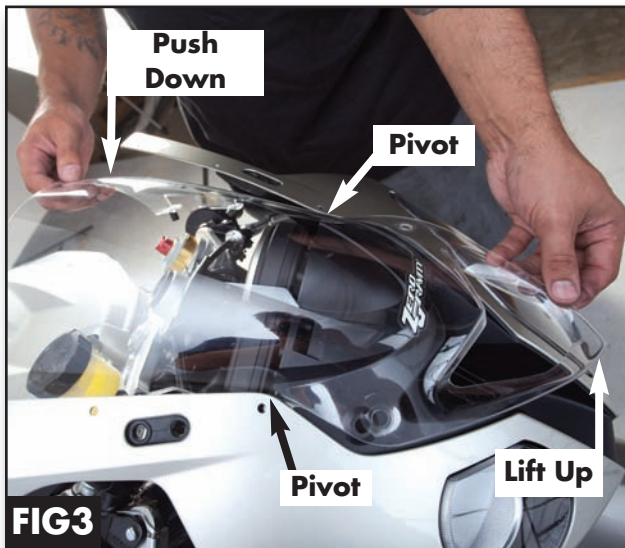

**Fig 3. HERE IS THE TRICKY PART!** You have to carefully recline the windscreen down from the fairing. It will be pivoting in two places one on each side. (See FIG3A).



**Fig 3A.** This photo shows the pivoting points on either side of the screen. **Be careful not to over pivot!**

## BMW S1000RR DIY WINDSCREEN INSTALL



**Fig 4.** Now you are ready to remove the screen. Slide the windscreen back to remove.



**Fig 5.** Before installing Zero Gravity Windscreen. Install Rubber wellnuts.



**Fig 6.** Install screen from the back side. Reclined in position, the front of the windscreen should be on the outer side of the fairing with the wellnut tab tucked inside fairing.



**Fig 7.** Starting from the top of the windscreen and working down, hand tighten all fasteners then reinstall mirrors.



**Fig 8.** Windscreen and Mirrors installed.

Please see [www.zerogravity-racing.com](http://www.zerogravity-racing.com) for further information concerning this product.