

# [POWER] [COMMANDER III]

CERTIFIED **USB**

## 2004-2007 Kawasaki VN2000 Installation Instructions

### Parts List

- 1 Power Commander
- 1 USB Cable
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro® Strip
- 1 Alcohol Swab
- 1 Protective Sleeve

**The ignition MUST be turned OFF before installation!**

You can also download the Power Commander software and latest maps from our web site at:

[www.powercommander.com](http://www.powercommander.com)

Button Adjustment Display




Faceplate Buttons

Expansion Port


USB Port




**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION**

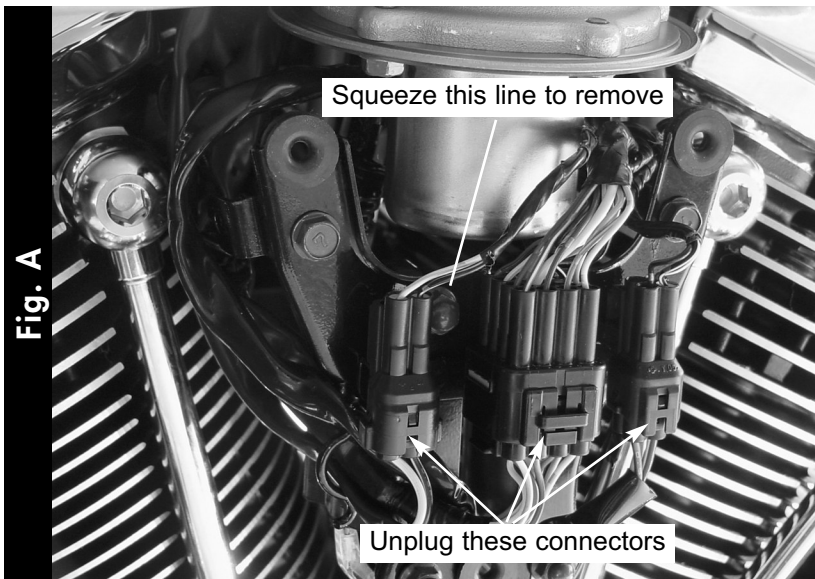

- 1 Remove the main seat and the passenger seat.
- 2 Remove the chrome left hand engine cover below the fuel tank.
- 3 Remove the fuel tank. To remove the fuel line squeeze the orange tabs of the connector and push in (Fig. A).
- 4 Unplug the three electrical connectors.

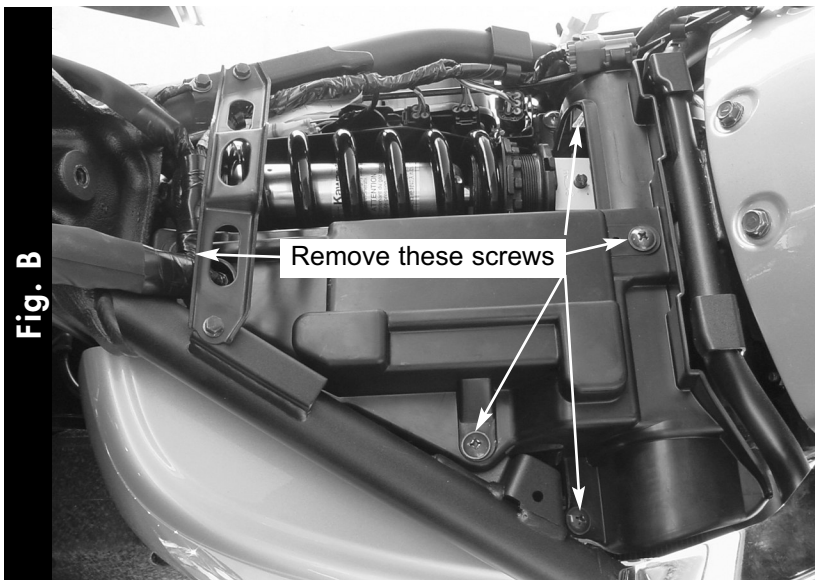


- 5 Remove the battery cover by removing the five screws (Fig. B).

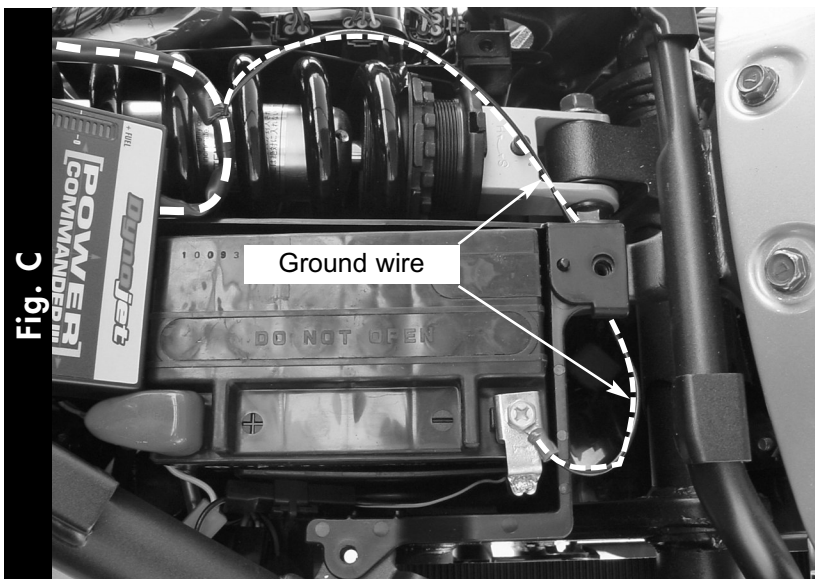

- 6 Lay the PCIII in front of the battery temporarily (Fig. C).
- 7 Attach the black ground lead from the PCIII to the negative side of the battery.




8 Route the PCIII harness towards the front of the bike (Fig. D). Follow the stock wiring harness through the guides.

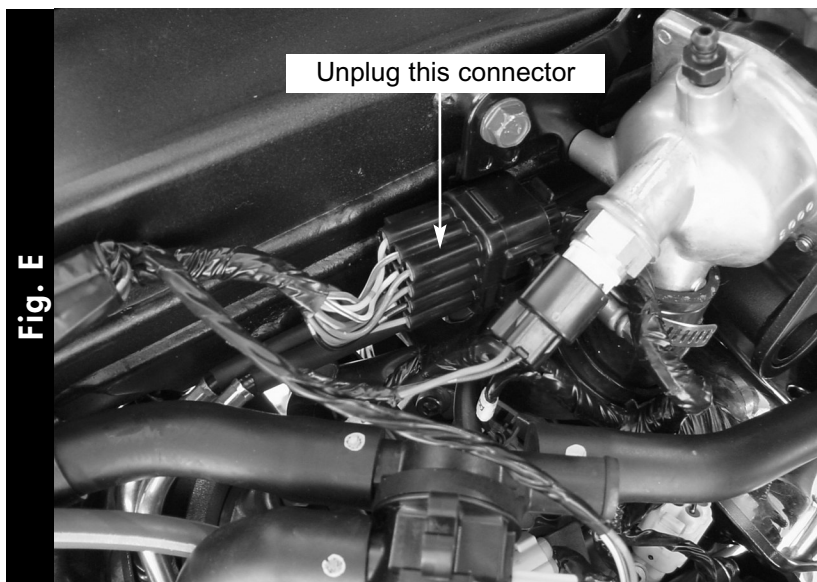

9 Locate the stock 12 pin black connector from the throttle body.

10 Unplug this connector (Fig. E). There is a tab on the backside of this connector that if you push will allow the connector to be removed from the frame.

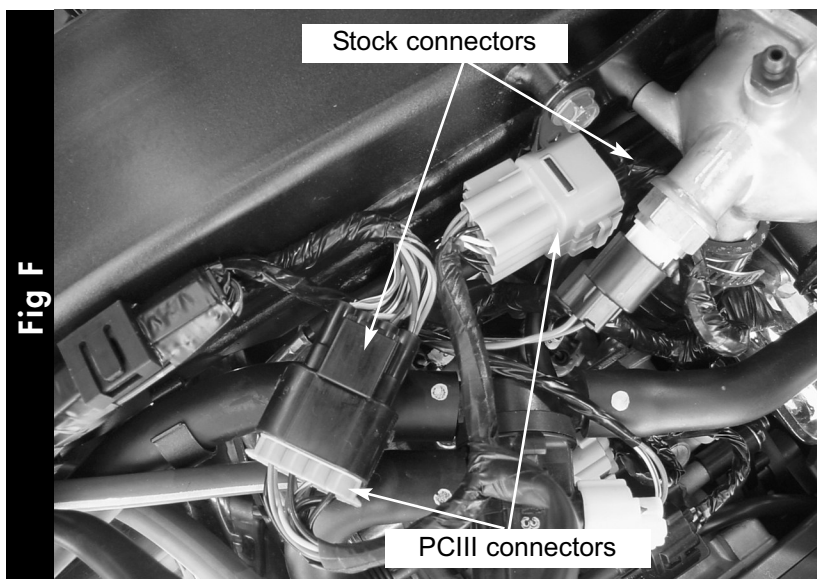

11 Plug the connectors from the PCIII in-line of the stock connector (Fig.F).

Fig. G



- 12 Reinstall the battery cover.
- 13 Slide the PCIII into the supplied protective sleeve.
- 14 Lay the PCIII in front of the battery cover and under the seat bracket (Fig.G).

*Note: The picture shows the PCIII without the protective sleeve. Make sure to use the sleeve to prevent any damage to the unit.*

- 15 Reinstall the fuel tank and connect the fuel line and connectors.
- 16 Reinstall the seat. Make sure the PCIII harness will not get damaged.

**Note:** If you have a European or California model it is recommended to remove the stock O2 sensor and install the Dynojet O2 eliminator part #76423007.