

[POWER] [COMMANDER III]

CERTIFIED **USB**

2007 MV Agusta F4 1000 / 312R Installation Instructions

Parts List

- 1 Power Commander
- 1 USB Cable
- 1 Wire Tap
- 1 CD-ROM
- 1 Installation Guide
- 1 Power Adapter
- 2 Power Commander Decals
- 2 Dynojet Decals
- 2 Velcro® Strip
- 1 Alcohol Swab
- 1 Zip tie

Button Adjustment Display



Faceplate Buttons

Expansion Port

USB Port



The ignition MUST be turned OFF before installation!

You can also download the Power Commander software and latest maps from our web site at:

www.powercommander.com


PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION

Fig. A




1. Remove seat and fuel tank.
2. Mount the Power Commander on top of the stock ECU. Secure the PCIII in place using the supplied zip tie (Fig. A).

Fig. B

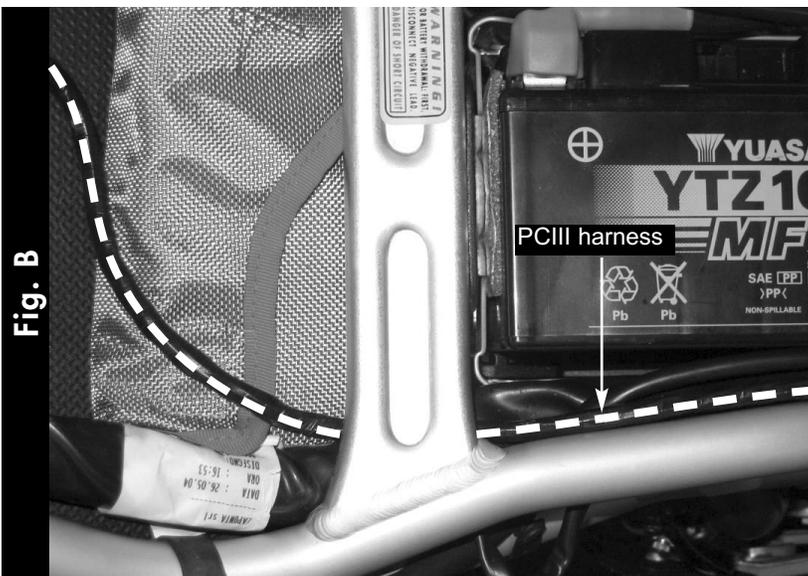


3. Route the Power Commander harness underneath the right side of the frame rail towards the front of the bike (Fig. B).

Fig. C

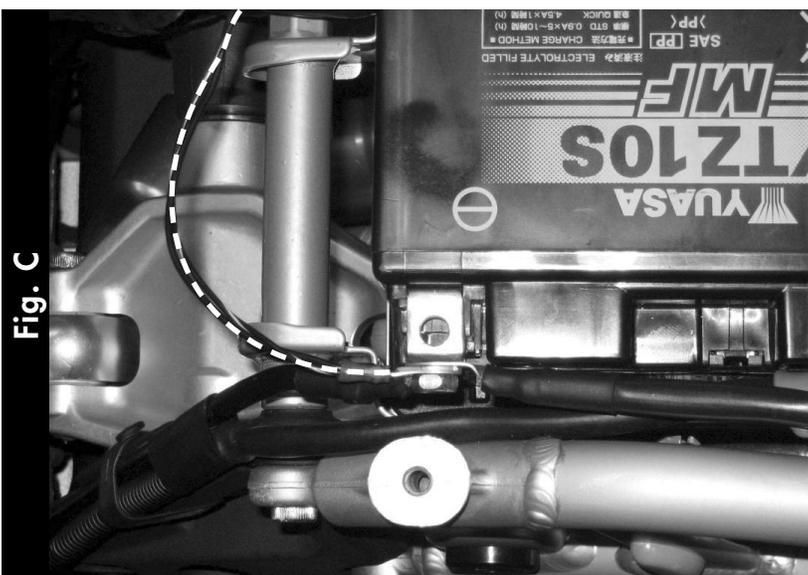


4. Connect the ground wire from the PCIII to the negative side of the battery (Fig. C).

Fig. D

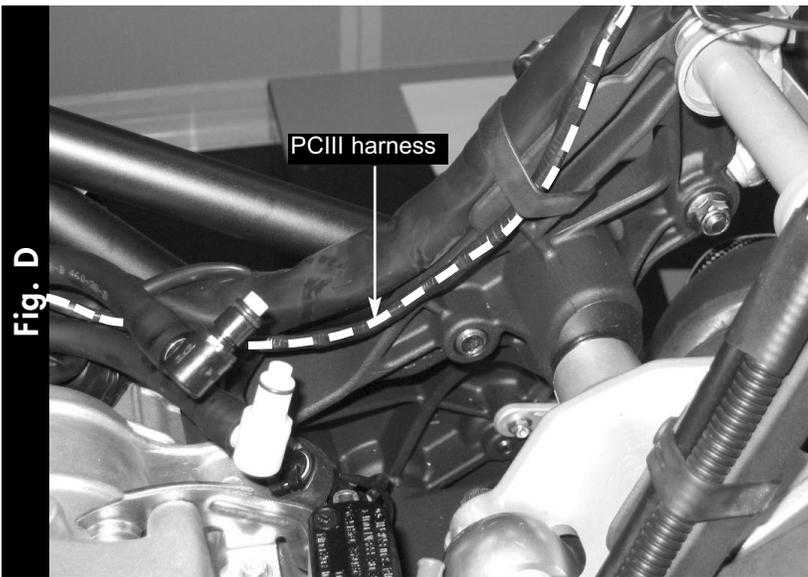

- Continue routing the PCIII harness along the inside of the bike's harness towards the throttle bodies (Fig. D).

Fig. E

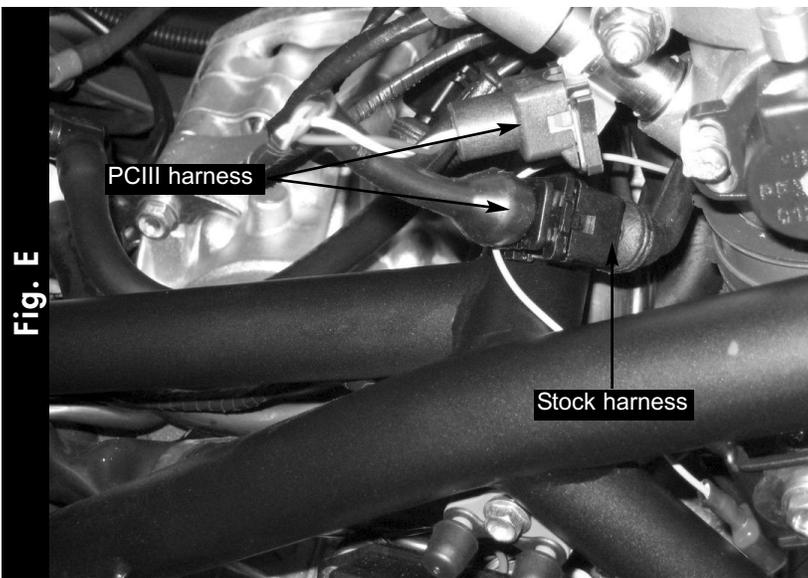

- Plug the connectors from the PCIII in-line of the stock injectors and wiring harness (Fig. E).

PCIII harness:

- Orange - cylinder 1
- Yellow - cylinder 2
- Green - cylinder 3
- Blue - cylinder 4

Fig. F



- Remove the small cover on the right hand side of the fuel tank. Locate the TPS on the right side of the throttle bodies. Attach the supplied wire tap to the WHITE/GREEN wire.
- Connect the GREY wire from PCIII to the wire tap (Fig. F).

Note: We recommend to use dielectric grease to seal these connections.

- Mount the fuel tank. Check to make sure that the PCIII harness does not either get kinked or pinched through the tank.