

INSTALLATION

MUFFLER BRACKET COVERS

7255

CUSTOMER SERVICE

877.370.3604 (toll free)

INSTALLATION QUESTIONS

techsupport@kuryakyn.com or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- · Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
 - •The product must be properly installed, maintained and operated under normal conditions.
 - Kürvakvn makes no warrantv, expressed or implied, with respect to any gold plated
- •Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breech of contract or duty between Kürvakvn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- •Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. L.E.D.'S contained in components of Küryakyn products will be warranted for defects in materials and workmanship for 3 years from the date of purchase where as all other components shall be warranted for one(1) year. This includes, but is not limited to: control modules, wiring, chrome & other components.
- •Küryakyn makes no warranty of any kind in regard to other manufacturer1s products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

For purchasing Küryakyn® products, you can receive a complete catalog free of charge. Send the Proof-of-Purchase below with your address to: Küryakyn, P.O. Box 339, Somerset, WI 54025.

Please indicate either Accessories Catalog for Harley-Davidson® or GL & Metric Cruisers.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved

PARTS INCLUDED

- Muffler Bracket Covers 2
- 4 5/16" Flat Washers
- Installation Instructions 1

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING

THE CONTENTS DESCRIBED HEREIN CAN RESULT IN

POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents

described herein can result in potential injury or material

damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents

described herein may negatively affect product performance and

TOOLS SUGGESTED

Socket Set and Ratchet

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.

STEP 1

Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface and turn off the ignition. Let cool.

WARNING! YOU WILL BE WORKING AROUND THE ENGINE AND EXHAUST SYSTEM DURING INSTALLATION. ENSURE THAT THE ENGINE AND EXHAUST SYSTEM HAVE FULLY COOLED TO PREVENT INJURY.

STEP 2 Remove the saddlebags from the bike.

-cont.-



Remove the OEM fasteners that secure the muffler to the mount. PIC 1 Set these aside, they will be reused.

Test fit the Muffler Bracket Cover to each muffler. The cover will fit between the hanger bracket and the brackets on the muffler. PIC 4 If there is any contact between the muffler and the lower edge of the Muffler Bracket Cover, proceed to Step 5. If there is no contact, tighten the fasteners securely.

NOTE: You may need to apply slight downward pressure on the muffler to get the cover in place between the upper hanger plate and the mounting brackets on the muffler.

CAUTION! It is the installer's responsibility to ensure that there is adequate clearance between the Muffler Bracket Cover and the muffler. Küryakyn is not responsible for any damage due to inadequate clearance.

STEP 5 On the under side of the covers, place one of the included 5/16" flat washers over each of the mounting holes. Use a piece of tape or drop of silicone on each side of the washers to hold them in place. PIC 2 & PIC 3


STEP 6 Install the covers over the muffler brackets.

NOTE: You may need to apply slight downward pressure on the muffler to get the cover in place between the upper hanger plate and the mounting brackets on the muffler.

STEP 7 Install the OEM fasteners and lock washers through the hanger and the Muffler Bracket Cover into the muffler bracket. Tighten securely. PIC 4

STEP 8 Repeat for the other side.


ATTENTION! It is the installer's responsibility to ensure that all of the fasteners (including pre-assembled) are tightened before operation of the motorcycle. Küryakyn will not issue a warranty on components lost due to improper installation. Periodic maintenance may be required.

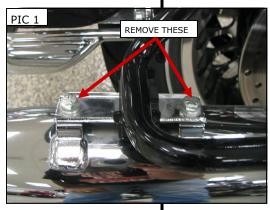

Küryakyn





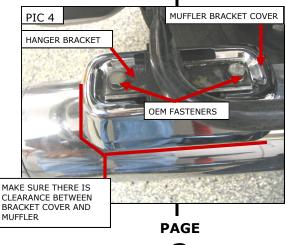

Ride On!

2