



INSTALLATION

UNIVERSAL TRAILER PLUG KIT

7670

PARTS INCLUDED

- 1 5-Pin Receptacle, with Bracket
- 2 10-32 x 5/8 Button Head Cap Screws
- 2 10-32 Hex Keps Nuts
- 1 Installation Instructions

Please read and understand entire instructions before starting installation.

THANK YOU FOR CHOOSING KÜRYAKYN!

IN ORDER TO PROTECT YOU AND OTHERS FROM POSSIBLE INJURY AND/OR PROPERTY DAMAGE OR LOSS, PLEASE PAY CLOSE ATTENTION TO ALL INSTRUCTIONS, WARNINGS, CAUTIONS AND ATTENTION NOTES REGARDING THE USE AND CARE OF THIS PRODUCT.

WARNING! THIS INDICATION ALERTS YOU TO THE FACT THAT IGNORING THE CONTENTS DESCRIBED HEREIN CAN RESULT IN POTENTIAL DEATH OR SERIOUS INJURY.

CAUTION! This indication alerts you to the fact that ignoring the contents described herein can result in potential injury or material damage.

ATTENTION! This indication alerts you to the fact that ignoring the contents described herein may negatively affect product performance and functionality.

TOOLS SUGGESTED

Set of Hex Wrenches, Combination Wrenches

STRICTLY OBSERVE THE FOLLOWING GUIDELINES IN ORDER TO USE THE PRODUCT PROPERLY AND AVOID POTENTIALLY DANGEROUS ACCIDENTS.


PROCEDURE

STEP 1 Read and understand all steps in the instructions before starting the installation. Park the motorcycle on a hard, level surface; turn off the ignition and allow the engine to cool.

INSTALLATION FOR GL 1800

STEP 2 Remove the rear panel to access trailer mount. Refer to owner's manual.

STEP 3 Locate the bolts on the bottom of the Kuryakyn Trailer Hitch Receiver Plate. (PIC 1). For installation of the Receptacle Bracket, you will need to locate the three Receiver Plate fasteners opposite of the Ball Mount Pin. Ensure that the installed Receptacle Bracket will not interfere with removal of the Ball Mount Pin.

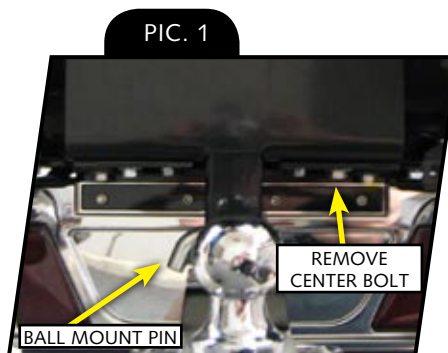

-cont.-

CUSTOMER SERVICE
877.370.3604 (toll free)

INSTALLATION QUESTIONS
techsupport@kuryakyn.com
or call 715.247.2983

LIMITED WARRANTY

Küryakyn warrants that any Küryakyn products sold hereunder, shall be free of defects in materials and workmanship for a period of one (1) year from the date of purchase by the consumer excepting the following provisions:

- Küryakyn shall have no obligation in the event the customer is unable to provide a receipt showing the date the customer purchased the product(s).
- The product must be properly installed, maintained and operated under normal conditions.
- Küryakyn makes no warranty, expressed or implied, with respect to any gold plated products.
- Küryakyn shall not be liable for any consequential and incidental damages, including labor and paint, resulting from failure of a Küryakyn product, failure to deliver, delay in delivery, delivery in nonconforming condition, or for any breach of contract or duty between Küryakyn and a customer.
- Küryakyn products are often intended for use in specific applications. Küryakyn makes no warranty if a Küryakyn product is used in applications other than intended.
- Küryakyn electrical products are warranted for one (1) year from the date of purchase by the consumer. Components of Küryakyn products containing L.E.D.s will be warranted for defects in materials and workmanship for 3 years from the date of purchase.
- Küryakyn makes no warranty of any kind in regard to other manufacturer's products distributed by Küryakyn. Küryakyn will pass on all warranties made by the manufacturer and where possible, will expedite the claim on behalf of the customer, but ultimately, responsibility for disposition of the warranty claim lies with the manufacturer.

ABOUT OUR CATALOG

You'll find all our innovations for H-D, GL and Metric Cruisers in our annual catalogs. Order online today—select the "CATALOGS" icon. Each Küryakyn® product comes with a Proof-of-Purchase good for a complimentary catalog. Details in packaging.

Be sure to ask your local dealer about other Küryakyn® products, the motorcycle parts and accessories designed for riders by riders.

©2005 Küryakyn USA® All Rights reserved.

kuryakyn.com



STEP 4 Remove the center bolt from the Receiver Plate, on the side opposite of the Pin. Line the single mount hole up to the bolt hole, reinstall the bolt through the Receptacle Bracket, into the Receiver Plate.

STEP 5 Reinstall the back panel removed in Step 2.

INSTALLATION FOR UNIVERSAL APPLICATIONS

(May require drilling)

STEP 2 Locate an easily accessible area for the trailer plug. Ensure that where it is mounted allows for the access cover to be fully opened. The access cover must open fully to allow the plug to be inserted.

NOTE: *If considering installation of the Bracket to the rear fender, be sure to compress the suspension to ensure proper clearance before making any permanent mounting location.*

STEP 3 Fasten the Receptacle Bracket to the bike using any of the three mounting holes provided on the Bracket. (Hardware not included)

STEP 4 Check for clearance issues. Ensure the Bracket and Wiring is not exposed to heat, potential pinch points, or moving parts.

WIRING HARNESS PLUGS:

To install the wiring harness for your application, remove the two Phillips screws on the receptacle to gain access to the wiring pins.

Ride On!

Kuryakyn®

PAGE

2