





Fitting Instructions for RAD0115BK/TI Radiator Guard
HONDA NC700X 2012

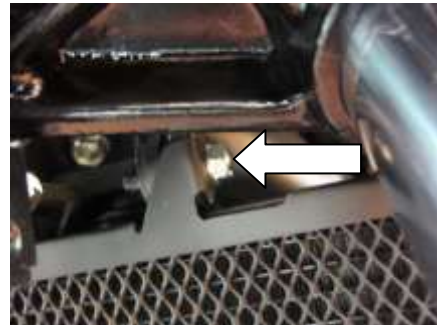

In This Kit There Should Be
1x Radiator Guard (RAD0115BK)
1 x Cable/Zip Tie
1 x M6x30mm Button head bolt
2 x M6 washers
1 x M6 Nyloc nut
2x 100mm Lengths of self adhesive Foam

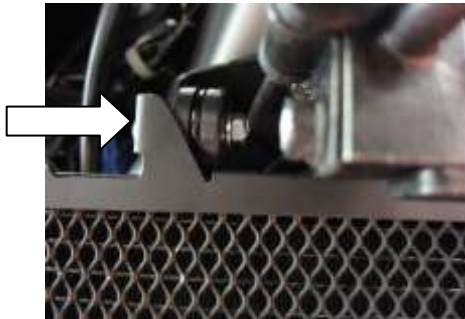

- To fit the radiator guard to the bike cut the foam strip provided into 10mm wide pieces and stick them to the back of the radiator guard frame, so that they sit between the radiator guard and the radiator.
- Undo and remove the upper radiator-mounting bolt arrowed in picture above right.
- Offer the radiator guard into position and using original upper bolt and secure the guard and radiator into position.
- Use the bolt, washers and nut from kit secure the remaining upper mount as shown above right.
- Using the cable/zip tie secure the guard into position in central position as arrowed in top picture.
- Tighten bolt.

ISSUE 1 31/01/2012 (NSY)

CONSUMER NOTICE

The catalogue description and any exhibition of samples are only broad indications of the Products and R&G may make design changes which do not diminish their performance or visual appeal and supplying them in such state shall conform to the order. The Buyer acknowledges no representation or warranty (other than as to title) has been given or will apply to the Products other than those in R&G's order or confirmation and the Buyer confirms it has chosen the Products as being of merchantable quality and suitable for its particular purposes. Where R&G fits the Products or undertakes other

R&G Racing
Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ
Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com



services it shall exercise reasonable skill and care and rectify any fault free of charge unless the workmanship has been disturbed. The Buyer is responsible for ensuring that the warranty on the motorcycle is not affected by the fitting of the Products. On return of any defective Products R&G shall at its option either supply a replacement or refund the purchase money but shall not be liable if the Products have been modified or used or maintained otherwise than in accordance with R&G's or manufacturer's instructions and good engineering practice or if the defect arises from accident or neglect. Other than identified above and subject to R&G not limiting its liability for causing death and personal injury, it shall not be liable for indirect or consequential loss and otherwise its liability shall be limited to the amounts paid by the Buyer for the Products or the fitting or service concerned. These terms do not affect the Buyer's statutory rights.

R&G RACING RETURNS POLICY (NON-FAULTY GOODS)

Returns must be pre-authorized (if not pre-authorized the return will be rejected). Goods may only be returned direct to us if they were purchased direct from us (customer must prove if necessary). Otherwise to be returned to original vendor. Goods must be in re-sellable condition, in the opinion of R&G Racing. All returns are subject to a 25% restocking and handling fee (25% of the gross value exc. P&P – at the prevailing price at time of purchase). The customer must pay any and all carriage charges. No returns of discontinued products, unless within 14 days of purchase. This policy does not affect your statutory rights and does not refer to faulty goods.





Instructions de montage
RAD0115BK/TI Grille radiateur HONDA NC700X 2012



Ce kit contient:

- 1x Grille radiateur (RAD0115BK)**
- 1 x Câble / Zip**
- 1 x M6x30mm Long boulon à tête ronde**
- 2 x M6 rondelles**
- 1 x M6 écrou en nyloc**
- 2x 100mm Longueurs de mousse adhésive**

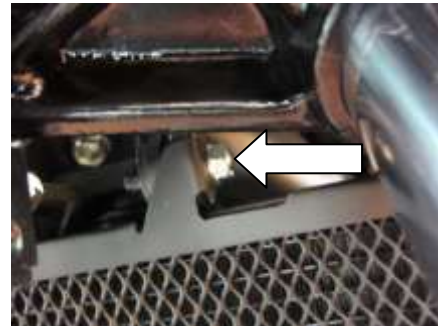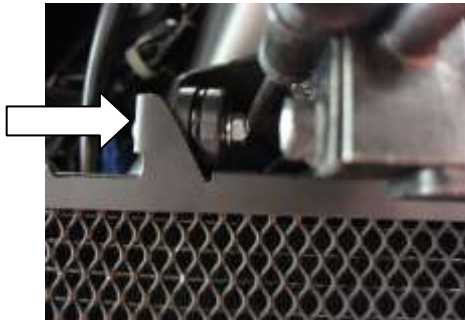

- Pour installer la grille radiateur sur la moto, couper la mousse en bandeaux de 10mm et collez-les au bas de la protection entre la protection du et le cadre.
- Dévisser et enlever le boulon supérieur de radiateur comme fléché sur l'image en haut à droite.
- Mettre la protection en place en utilisant les boulons supérieurs d'origine at sécuriser la protection et le radiateur en position.
- Utiliser les boulons, rondelles et écrous du kit et sécuriser comme en haut à droite.
- A l'aide du câble / Zip, sécuriser la protection en position central comme sur la photo du haut.
- Serrer les boulons

ISSUE 1 31/01/2012 (NSY)