



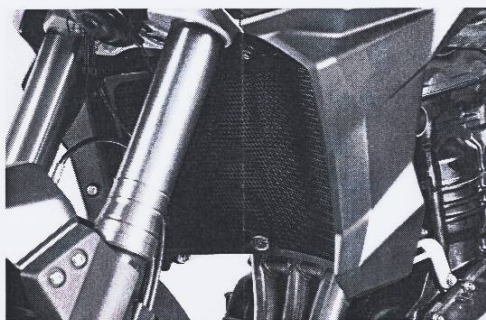


Fitting Instructions for RAD0118BK Radiator Guard
TRIUMPH EXPLORER 1200 2012




In This Kit There Should Be
1x Radiator Guard (RAD0118BK)
2x 100mm Lengths of self-adhesive Foam

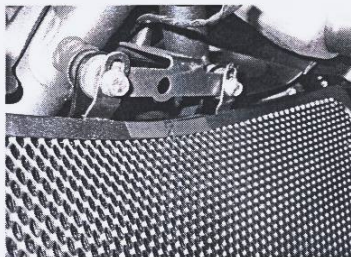

PICTURE 1

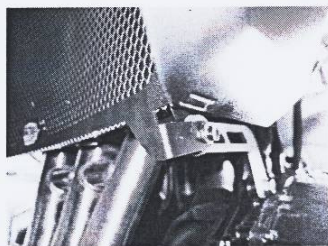

PICTURE 2

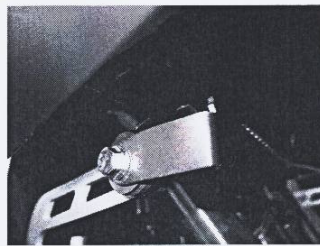

PICTURE 3

R&G Racing
Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ
Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com



- To fit the radiator guard to the bike cut the foam strip provided into 10mm wide pieces and stick them to the back of the radiator guard frame, so that they sit between the radiator guard and the radiator.
- Undo and remove the two upper radiator mounting bolts as shown in picture 1.
- Undo and remove the lower radiator mounting bolts as shown in pictures 2 and 3.
- Offer the radiator guard into position and using the original upper bolts secure the guard and radiator into position as original.
- Secure the bottom of the radiator guard onto the radiator using the original lower bolts.

ISSUE 1 11/05/2012 (NSY)

R&G Racing
Unit 1, Shelley's Lane, East Worldham, Alton, Hampshire, GU34 3AQ
Tel: +44 (0)1420 89007 Fax: +44 (0)1420 87301 www.rg-racing.com Email: info@rg-racing.com