

CUSTOM MOTORCYCLE ACCESSORIES

NEW RAGE CYCLES

DUCATI 1199/899 PANIGALE FENDER ELIMINATOR KIT

1. Remove front and passenger seats from bike
2. Remove four 4mm allen bolts (picture 2 & 3)
3. Lower stock turn signal and license plate bracket exposing stock connectors
4. Unplug turn signal and license plate light connectors
5. Plug in the new turn signal connectors (picture 4)
6. Slide torx bolt up through turn signal bracket and rubber grommet, loosely threading through flat washer and into nyloc nut (picture 5)
7. Remove backer off double sided tape
8. Center your turn signal bracket and tighten down on the torx bolt sandwiching your bracket with the body panel underneath. (Do not over tighten)

stock setup



To inquire about custom parts installations

CONTACT US


INFO@NEWRAGECYCLES.COM | 914.339.2929

CUSTOM MOTORCYCLE ACCESSORIES

NEW RAGE CYCLES

License Plate Bracket Install

1. Remove 2 6mm allen bolts (picture 6)
2. Slide bolts through new license plate bracket and tighten down
3. If using passenger pegs, remove 6mm allen bolts and reinstall using supplied hardware (2 bolts / 2 spacers)
4. Sandwich spacers between license plate bracket and passenger peg bracket

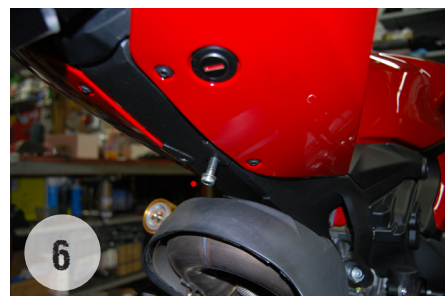

finished