



Corsa Moto Dome Oil Plug CM104-001 and CM104-002



Parts Needed:

- 1 CM Oil Plug

Weekend Project Category:

- Appearance

Fits The Following Motorcycles:

- Ducati Scrambler

Tools Required:

- 5mm Allen wrench

Tools Required: 2 minutes

Difficulty:



WARNING: Laws concerning this product vary from state/province to state/province. Your state/province may prohibit its use on public roads or restrict its use to novelty, show use, off-road areas, or race facility areas only. In some states/provinces off-road uses are also prohibited. The manufacturer and retailer assume no responsibility for any use or application of this product in violation of any applicable law. Before installing this product, please check your state/province and

WARNING: It is recommended that this kit be installed by a certified Triumph technician, following the Triumph service manual to aid in proper fitting. Verify all torque specs in Triumph service manual.

Other Items We Think You May Like



Vintage Rear Sprocket




Speedo Gauge Relocation Kit



Four Bolt Risers




Master Cylinder Cover

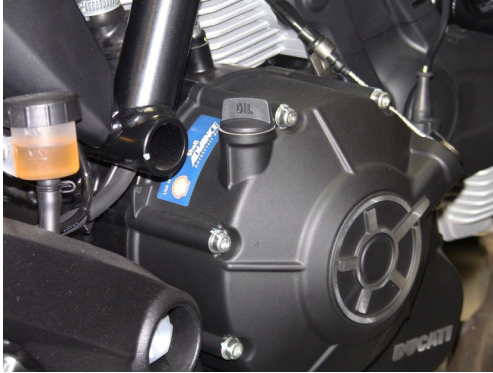

Step 1:

Remove stock oil plug. Use a crescent wrench if necessary.

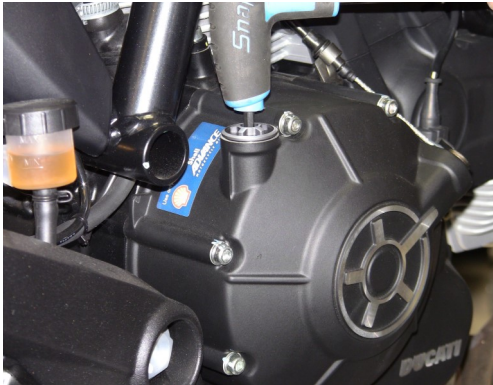

Step 2:

Install CM Oil Plug with 5mm Allen wrench. Tighten until snug.