

- 1 Download the FuelPak FP3 App



Available on the
App Store

- 2** Locate the Connector on your Motorcycle



Softail > Under the Seat



Sportster > Under Left
Hand Side Cover




Dyna > Under Left Hand
Side Cover




Touring > Under Left
Hand Side Cover

3

Identify the 6-PIN HD-LAN Connector and plug in your Fuelpak device

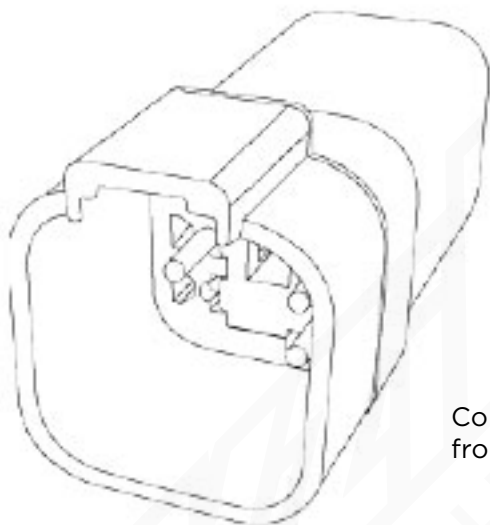

Connector
from Bike

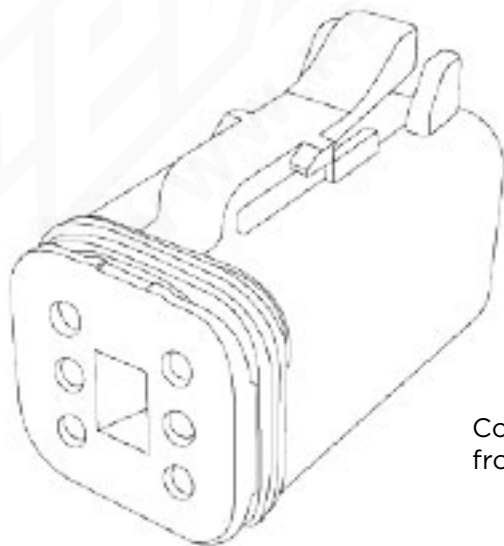

Connector
from FP3 Unit


- 4** Turn the ignition to the 'On' Position
(DO NOT START ENGINE)



After a few seconds, the LED lights
will begin flashing




5 Select Settings Icon

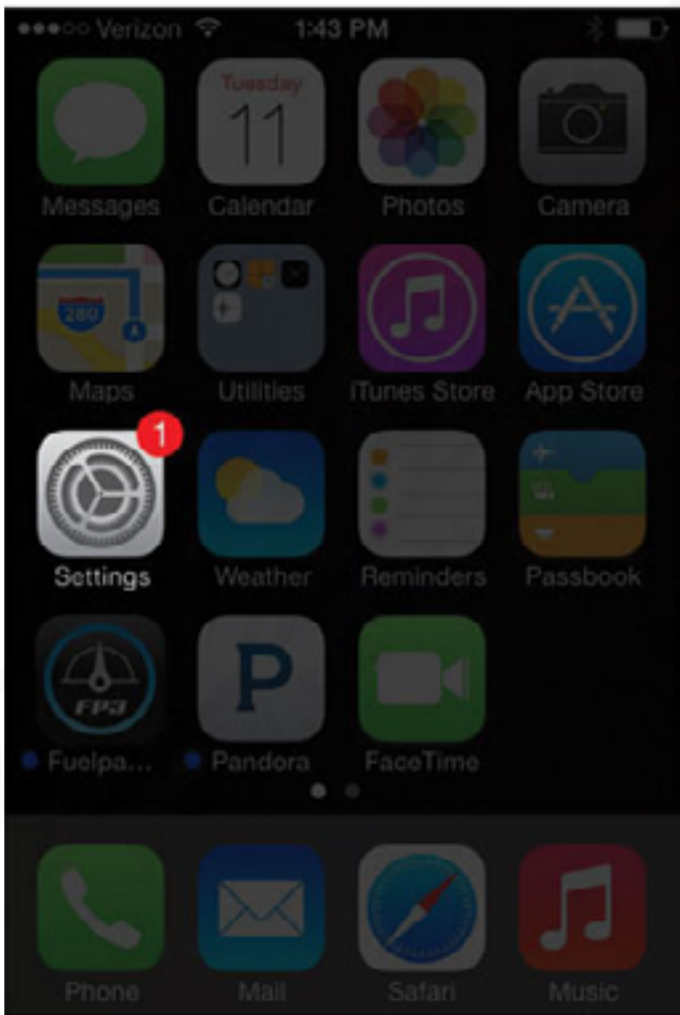

- 6** Select Bluetooth under Settings Menu




- 7** Turn on Bluetooth and connect

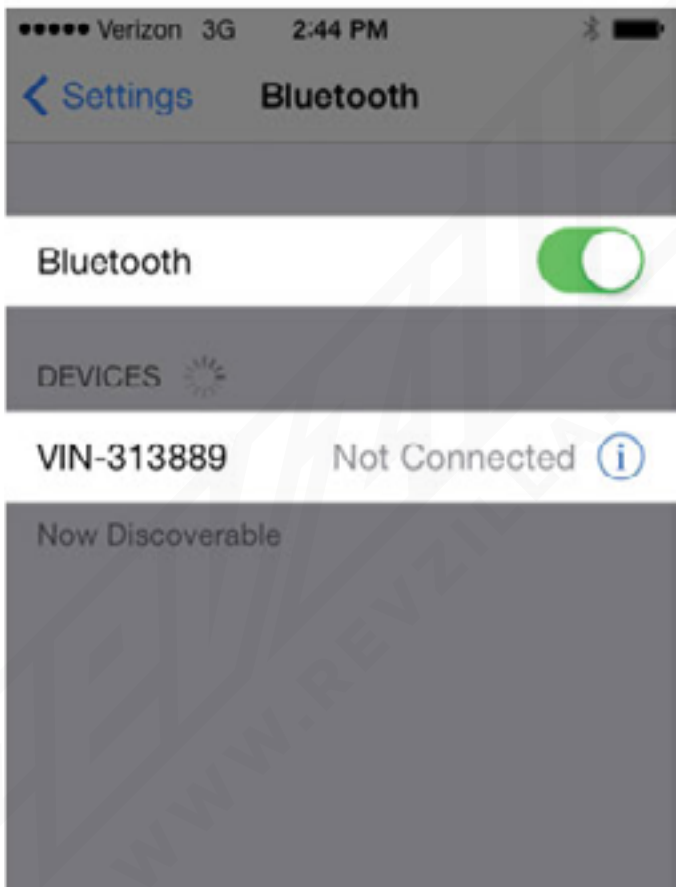


Ensure the Bluetooth toggle switch is in the “on” position. Then select the device label “VIN” ending with the last 6 digits of your motorcycle’s VIN number. “Connected” will appear on the right side once the device has successfully paired with the Fuelpak FP3.

8 Start the Fuelpak FP3 App

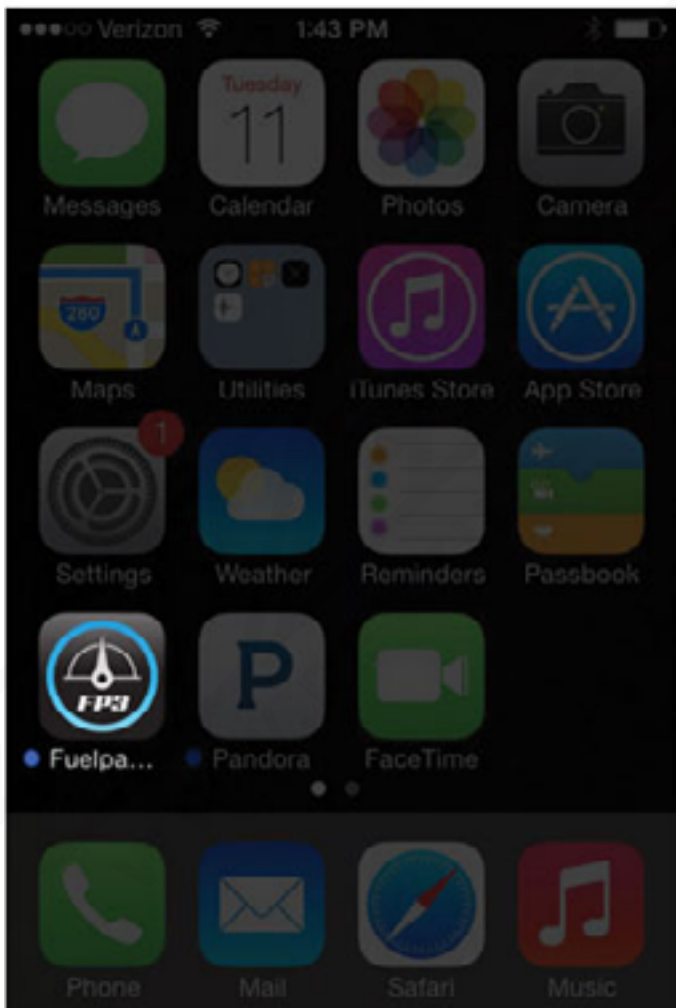


Open the Fuelpak FP3 Application.

9 Confirm Connectivity

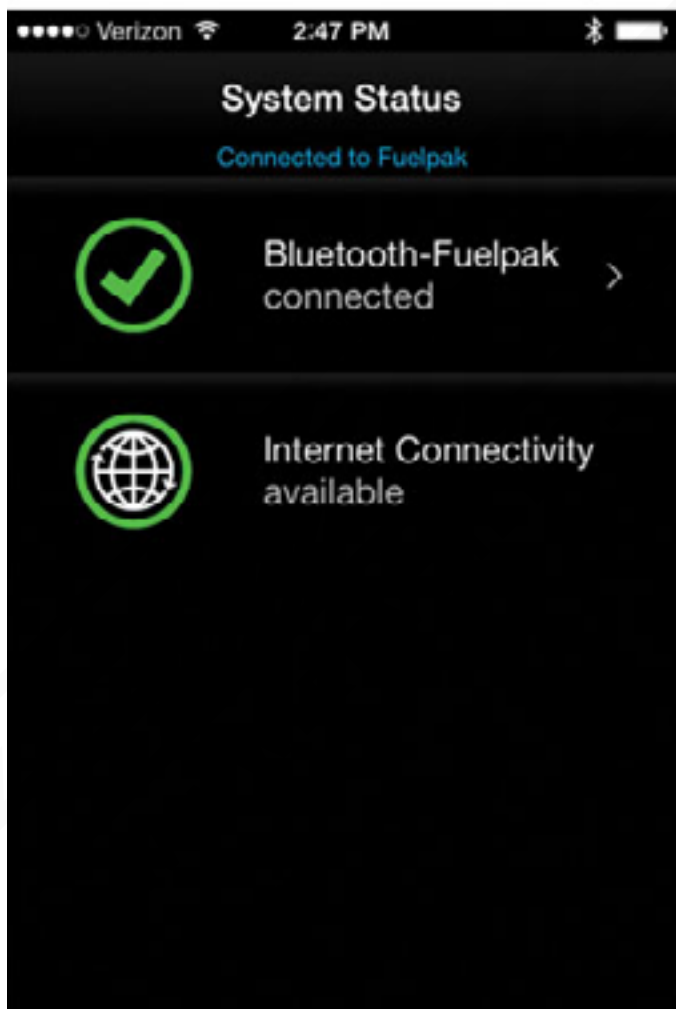

Ensure Bluetooth is connected and your device has an active internet connection.

10 Map Lookup

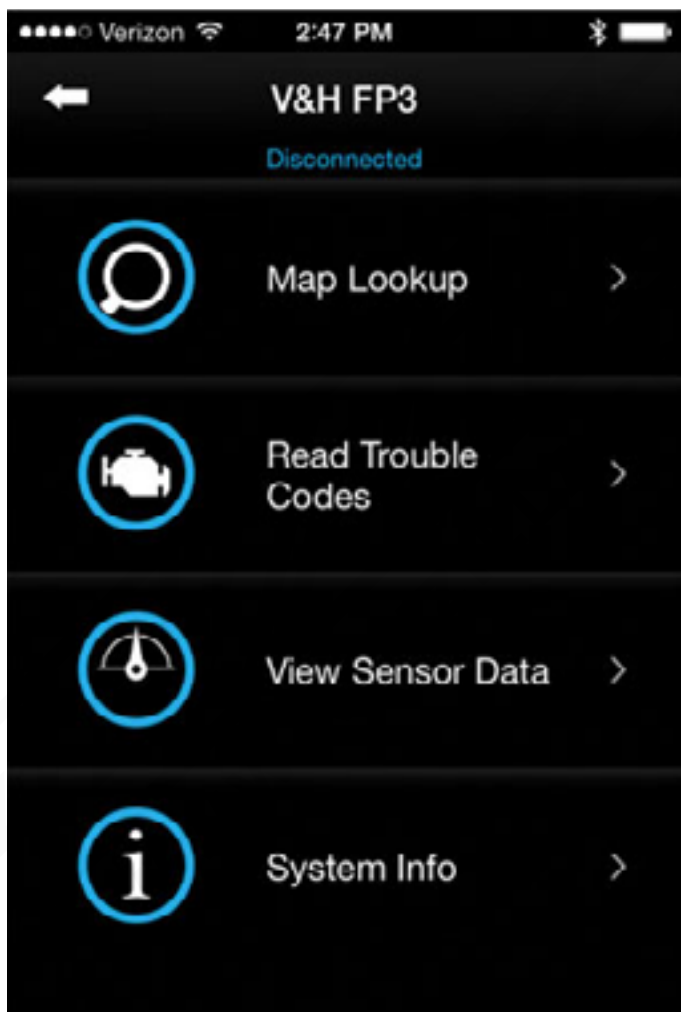

Now begin the Map Lookup process to search for the Fuelpak FP3 map for your motorcycle. The first time you flash a map to your ECU, the Fuelpak FP3 will be permanently married to that "VIN" number.