

INSTALLATION INSTRUCTIONS

DRAG SPECIALTIES SADDLEBAG SUPPORTS P/N DS-110851

ATTENTION INSTALLER (if other than owner): Please forward this instruction sheet to the purchaser of this product. These instructions contain valuable information necessary to the end user.

INTRODUCTION: These instructions describe the procedure for properly installing these Saddlebag Supports onto 1982-94 FXR models.


Review instructions carefully before beginning, as they contain important information. Please retain for future reference.

Particularly important information is distinguished in these instructions by the following notations:

NOTE: A NOTE provides key information to make procedures easier or clearer.

CAUTION: A CAUTION indicates special procedures that must be followed to avoid damage to the motorcycle and/or accessories.

WARNING!: A WARNING indicates special procedures that must be followed to avoid injury to a motorcycle operator or person inspecting or repairing the motorcycle.

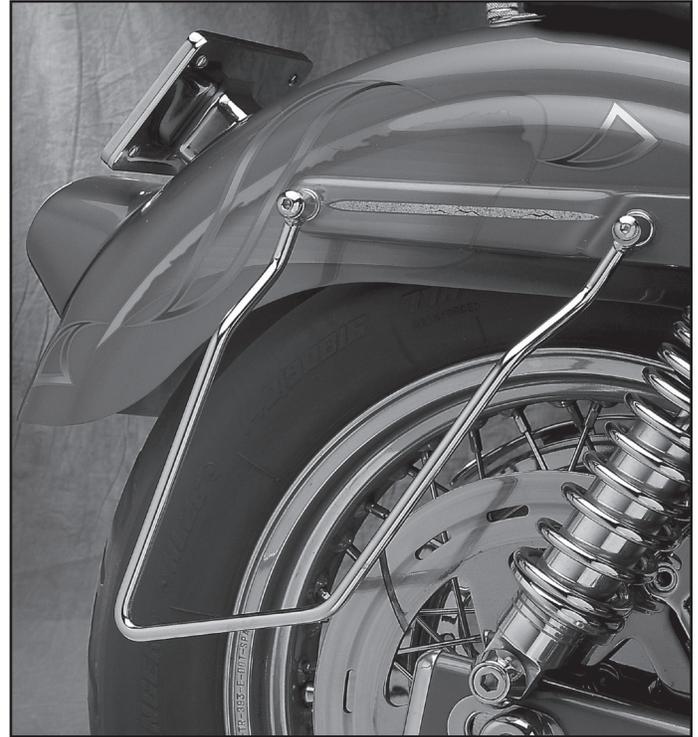

TOOLS REQUIRED:

2 - 9/16" combination wrenches

PROCEDURE:

NOTE: Rear turn signals must be removed or moved on all models to mount these Saddlebag Supports. We recommend Drag Kit #DS-280318. Mount the Supports one side at a time.

1. On 82-86 models, remove bolt just behind upper shock mount, turn signal and any hardware from the turn signal mounting hole. Remove bolt at the rear of the fender strut.
2. On 87-94 models, remove bolt just behind upper shock mount and turn signal at the rear of the fender strut.
3. Install Support using the 3 1/2" long bolt in the front hole and the 2" long bolt in the rear hole. Reuse OEM washers and nuts. Tighten all hardware securely.

4. Repeat for the other side.

WARNING!: Check clearances inside fender, from all fasteners to tire. Trim or adjust as required.

WARNING!: After installing both sides, check Support Bracket clearance to all parts of the motorcycle by compressing and extending the suspension completely. Supports **must not** contact anything, especially any moving parts or brake components, at any time. If contact occurs, readjust Support until it does not make contact. Clearance must also be checked after saddlebags are installed.

WARNING!: Maximum recommended saddlebag load is 7 pounds. Make sure all hardware is tight before operating motorcycle.

