

# INSTALLATION INSTRUCTIONS

## LEATHER HANDLEBAR GRIP AND CLUTCH & BRAKE LEVER COVERS

P/N DS-243062, DS-243061, DS-243060



Congratulations! The new leather lever covers you have purchased are another exclusive accessory of Drag Specialties'. These covers will fit any stock rubber handlebar grip and foam style grip, or stock and custom replacement brake or clutch lever. They are made from the finest materials available. These covers will add a unique new highlight to your bike along with extra comfort.

Before starting installation, take a couple of minutes and read through the following instructions and illustrations. This will save you time and problems.

### INSTALLATION

1. Clean both levers and/or handlebar grips, making sure there is no grease or oil on them.
2. Wrap one of the leather covers around the brake lever grip area with the lace holes facing the handlebar. **NOTE:** You may want to use a rubber band to hold the cover in place until you get the lacing started. Drag Specialties recommends use of an adhesive to insure secure fit.
3. String one of the leather laces (supplied) through the first two corresponding holes in the cover. Starting at the end closest to the handlebar controls. Depending on your cover style it may be necessary to start lacing from the top or bottom. On your last hole the lace should pass down from the top.
4. Complete lacing as shown in illustration, feeding the lace from outside in, cinching the lacing tight as you go.
5. Now that you have the cover completely laced, tie a square knot. **NOTE:** DO NOT overtighten the knot at this time.
6. Repeat these steps for the other side.

**SPECIAL NOTE:** After you have ridden the bike for a few days, loosen the knot at the end of the lacing and retighten the lacing and readjust the cover alignment on the levers. Securely retie the knot.

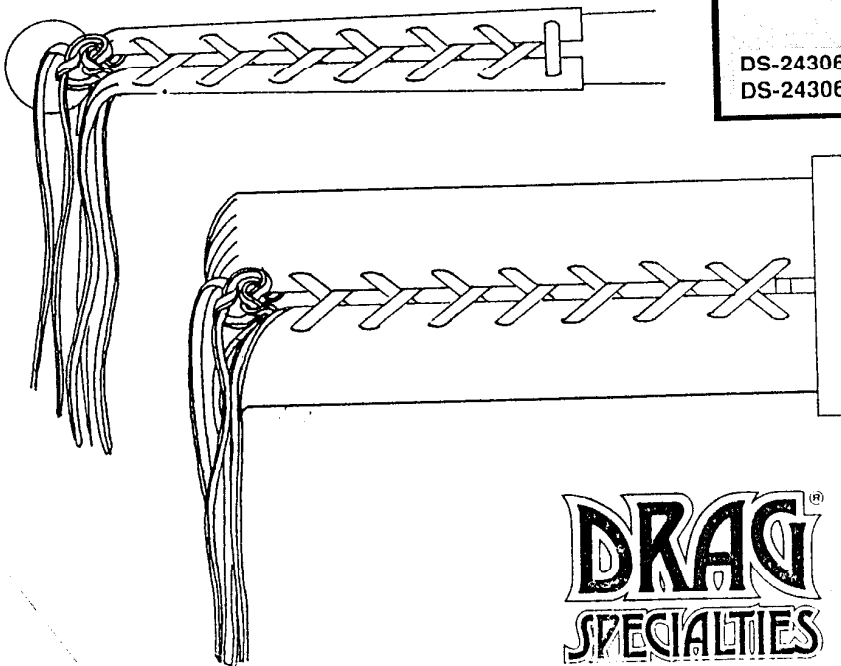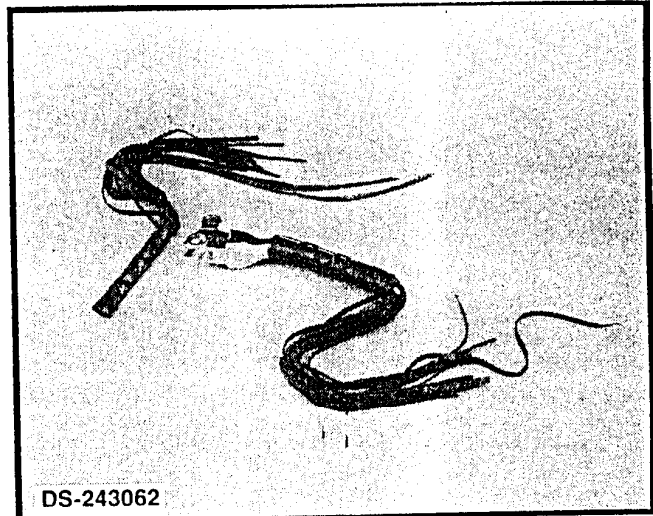

**DRAG<sup>®</sup>**  
**SPECIALTIES**

Box 2336, Minneapolis, MN 55440

P/N 010004