

EE Radiator Guards Installation Instructions



FIG 1a



FIG 2a

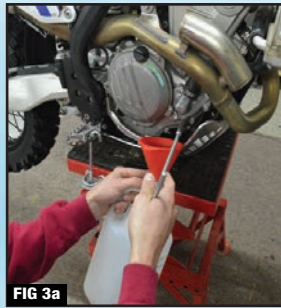


FIG 3a

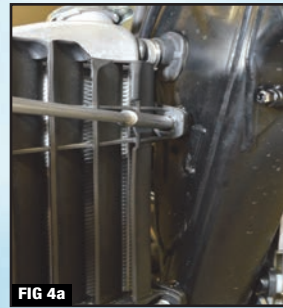


FIG 4a



FIG 5a



FIG 1

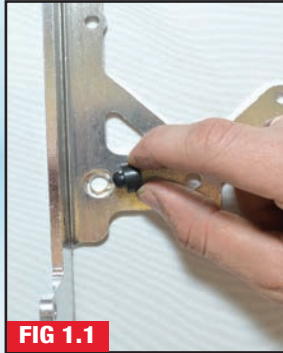


FIG 1.1

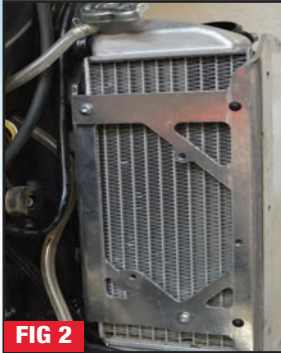


FIG 2

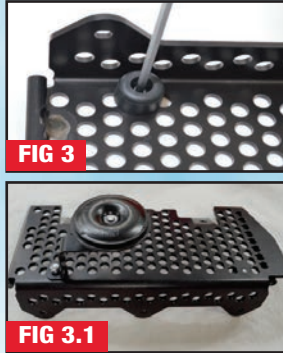


FIG 3



FIG 3.1

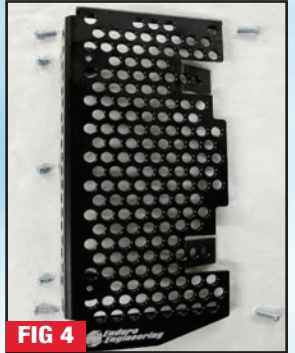


FIG 4



FIG 5

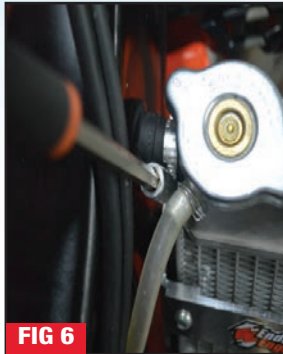


FIG 6



FIG 7

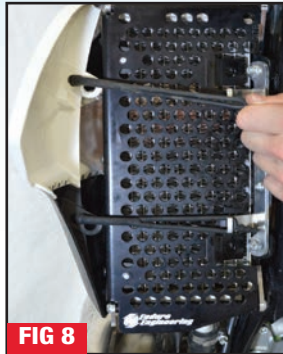


FIG 8



FIG 9

Note: Installation of this product requires the use of Enduro Engineering 11-017 radiator braces.

- Follow steps 1-5 of the 11-017 instructions if you are installing the 11-017 at the same time as the 12-017 radiator guards.

11-017 Radiator Brace Instructions

- Remove the seat (fig. 1a).
- Remove the tank and shrouds (fig. 2a).
- Drain the coolant (fig. 3a). **NOTE:** you will need to remove the radiator cap to allow the coolant to fully drain. Once the coolant is drained, be sure to put back the drain bolt.
- Using an 8mm T-handle or socket, remove the two mounting bolts for the radiator and louver. (fig. 4a).
- Loosen the top radiator hose clamp only, and disconnect the radiator (fig. 5a)

- If the bike already has the EE radiator braces (11-017) installed, you will need to use a 4mm Allen wrench to remove the black support rods from the radiator brace (Fig. 1). **NOTE:** Install Rubber Grommets on Radiator Braces as shown prior to installing (Fig 1.1) If the bike did not have EE radiator braces installed you will need to install the outer (017R/L2) piece (without the black support rods) as shown (Fig. 2).
- Connect the rubber bumpers to the back side of the radiator guards using the provided M6x8mm button head bolts (Fig. 3). **NOTE:** For models with a horn, use the provided 6 x 16mm button head bolt and 6mm nylon nut to secure both the rubber bumper and horn bracket. (Fig 3.1)
- Mount the 12-017 radiator guard to the 11-017 radiator braces using four M6x16mm button head bolts at the rod locations, and three M6x8mm button head bolts on outside (Fig. 4 & 5). **NOTE:** It may be helpful to only finger tighten all of the bolts until they have all been started, then go back and tighten each one.
- Put the radiator and brace/guard assembly into location over the bosses on the frame, connect the upper radiator hose and tighten the clamp at this time (Fig. 6).
- Using the provided M6x16mm hex head bolts and nylon spacers, fasten the radiator and brace/guard assembly to the frame (Fig. 7). With the 3 supplied M6x10mm button head bolts, attach part 017R/L2 to part 017R/L1.

- If not already done, repeat the previous steps on the opposite side of the bike.
- Use the supplied rubber straps to secure your radiator shrouds. **OPTIONAL:** If you would like the shrouds to fit tighter to the radiator, using a 3/8" drill bit, drill a hole on the outside edge of each factory hole (Fig 9).
- Replenish the engine coolant.
- Connect the fuel tank and shrouds, now using the provided rubber straps to secure the shroud as shown (Fig. 8).
- Connect the seat.
- Have fun and ride safe!

WARNING AND DISCLAIMER

All parts manufactured, designed or sold by Enduro Engineering, Inc. (EEI) are to be installed by a licensed motorcycle dealer or a licensed motorcycle technician. Motorcycles can be dangerous. Serious injury, death and property damage can result from the use of motorcycles. This risk is increased by improper installation or misuse of after market parts. EEI's customers must exercise good judgment in the use, control, alteration, part selection and installation, and maintenance of their motorcycles. In the event of a possible defect in material or design, or any other defect in a part manufactured, designed or sold by EEI, the responsibility of EEI is limited to either a refund of the purchase price or the replacement of the part if EEI determines the part to be defective, and subject to EEI's inspection of the part within thirty (30) days from the date of purchase. (Note: any attempted repairs or modifications made to EEI products will void this limited warranty). EEI, under no circumstances will be responsible for incidental and/or consequential damages, property damage, personal injury damage, or damage, injury, cost or expense of any kind or nature whatsoever. By purchasing an EEI product or a product sold by EEI, you (1) acknowledge the above disclaimer and agree to its terms; (2) agree that any claim brought against EEI arising from and/or pertaining to or otherwise related to a part manufactured, designed or sold by EEI must be brought in the Michigan State Courts located in the County of Ingham or in the Federal District Court for the Western District of Michigan and that Michigan law shall apply on all issues; and (3) any claim against EEI must be brought within one (1) year of purchase of the product. EEI makes no other warranty, express or implied, including without limitation any warranties of merchantability and fitness for a particular purpose. R.JRF.Sec.randt.warninganddisclaimer. 5 2 08

Enduro Engineering

QUALITY OFF-ROAD MOTORCYCLE PRODUCTS

INSTRUCTIONS

EE Radiator Guards

Part# 12-017