



STREAK WITH LIGHTSTRIKE™

Parts Included: 1 STREAK LIGHT
1 HARDWARE KIT

Installation Instructions:

1. If possible, put the motorcycle on a lift, center stand or other type of stable jack.
2. Remove seat and Tour Pack liner. Set them aside for reinstallation.
3. Place masking tape on the left side corner of the Tour Pack lid. FIG.1
4. Center and hold the **Ciro Streak Light** up to the Tour Pack lid. Mark the wire location. FIG.1
5. Measure $11/16"$ (18mm) up from the rim of the Tour Pack lid. Mark with a horizontal line. FIG.2
6. Drill a $1/8"$ (3mm) pilot hole at the marked location. Use a step drill to increase the size to $1/2"$ (13mm). FIG.2
7. Inside the Tour Pack pointing out. Near the front left corner drill a $1/8"$ (3mm) pilot hole. $1/4"$ (7mm) up from the bottom. FIG.3
8. Outside the Tour Pack pointing in. Use the step drill increase the hole size to $1/2"$ (13mm). FIG.4
9. Remove the masking tape and thoroughly clean the mounting surface with hot water and soap.



MARK THE TAPE HERE.

FIG.1



MEASURE $11/16"$ UP FROM THE RIM OF THE LID AND MARK THE TAPE.

FIG.2



DRILL OUT OF THE TOUR BOX FOR THE PILOT HOLE.

FIG.3



DRILL INTO THE TOUR BOX TO INCREASE THE HOLE SIZE.

FIG.4

WARNING:

This indication alerts you to the fact that ignoring the contents described herein can result in potential serious injury or death if not followed.

CAUTION:

This indication alerts you to the fact that ignoring the contents described herein can or will result in material damage and/or personal injury.

ATTENTION:

This indication alerts you to the fact if you ignore this detail you will affect the performance or functionality of the product.

All **Ciro** products are designed for "easy assembly" and/or "plug and play". We recommend a competent mechanic install our products, using standard mechanical procedures to assure a safe and successful installation.

NOTE:

Ciro products are designed and manufactured under very strict quality control. **Ciro** warrants that products sold to the original purchaser shall be free from any defects in materials and workmanship for a period of 3 (three) years from the date of purchase, and a lifetime warranty against LED failure. **Ciro** will have no obligation if the customer cannot show proof of purchase. Warranty will not be granted unless the part is properly installed and maintained. **Ciro** will not be liable for any consequential and incidental damages, including labor, or non-**Ciro** products. Please visit our website Ciro3d.com for our complete warranty policy.


ATTENTION: The connector pins on the ends of the wire are delicate. Be careful when handling them.

10. Insert the wire into the hole drilled into the Tour Pack lid in step 6. Use tape to hold the Ciro Streak Light in place on the lid.

11. Slide the wire under the plate in the bottom of the Tour Pack. When it comes out near the left front corner, install the grommet into the hole drilled in step 8. Push the wire through the grommet and pull it out the other side. A small amount of soap and water will help. FIG. 3 - 4 - 5.

12. Place the female connectors onto the male connectors on the Ciro wire harness. Align the brown and black wires into one connector. Align the red, blue, violet wires into the other connector. Gently push the pins into the female connectors. FIG. 6

13. Install the Ciro wire harness in line with the 6-pin harness on the motorcycle. Plug in the Streak Light connectors. FIG. 7

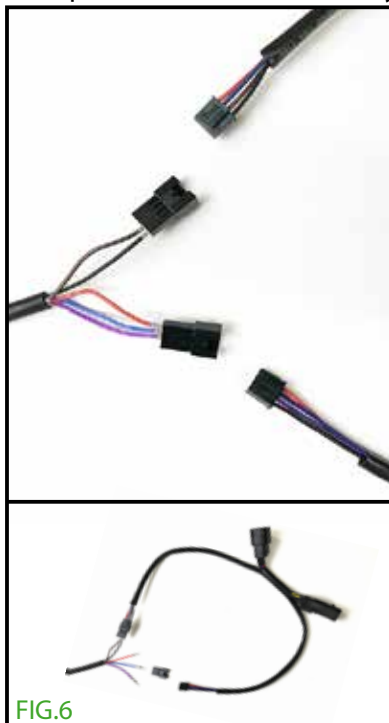

14. Turn on the ignition and test the Ciro Streak light functions.

15. Clean the surface where the Ciro Streak light installs.

ATTENTION: Thoroughly clean the mounting surface with denatured alcohol to remove all wax, oil, and residue.

NOTE: New motorcycles are delivered from the factory covered in protective oil. Remove it before installing this product.

NOTE: Do not install if the temperature is below 50° F. The adhesive will not cure properly.

16. Peel off the adhesive liner from the Streak Light. Put the light into place and press firmly for 30 seconds.

17. Route the wire over the hinge. Secure it to the Tour Pack lid with the included zip tie keepers. Install the Tour Pack liner. FIG. 5

18. Under the seat route the wire harness along the left side of the frame and secure it using zip ties. Reinstall the seat.

19. To use Lightstrike follow the included instructions.

LIGHTSTRIKE TECHNOLOGY™

Lightstrike Technology uses your smartphone and Bluetooth to control this product.

- 1) Download the Lightstrike app where you get your iOS or Android phone apps.
- 2) The default password is 000000 (six zeros).
- 3) For additional information and video scan the QR code.

