




Custom Dynamics® Support Rail Bolt Covers Installation Instructions

We thank you for purchasing the Custom Dynamics® Support Rail Bolt Covers. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800) 382-1388.

Part Numbers: CD-FILL-COV-B CD-FILL-COV-C

Package Contents:

- Support Rail Bolt Covers (2)

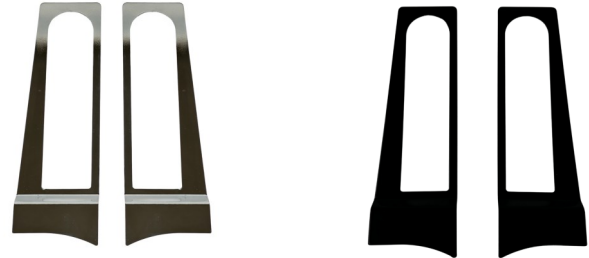

Fits: 2009-2024 Harley -Davidson® FLHT, FLHR, FLHX, and FLTR Touring models (Including CVO). Requires installation of ProBEAM® Fillerz® Lights (Sold separately).

Installation:

Note: Must be installed with Custom Dynamics® [ProBEAM® Fillerz®](#) lights (sold separately). In addition, these covers can only be added at the time of Fillerz® installation, they cannot be added after Fillerz® are already installed on the motorcycle.

1. Remove all necessary parts to remove battery negative cable from battery.
2. Remove both saddlebags and store in a safe place to prevent damage.
3. Clean area at support rails with denatured alcohol, let dry 1-2 minutes.
4. Remove protective red film from back of Support Rail Bolt Cover and place into the support rails covering the support bolts.
5. Continue to the installation instructions for the ProBEAM® Fillerz® installation. **Note: The alignment tabs on the ProBEAM® Fillerz® will need to be removed. Recommend filing down or clipping. Shown in Figure 1.**




ATTENTION

Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on vehicle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure vehicle is on level surface, secure and cool.

Important: Ambient install temperature must be 60 degrees F or higher. Allow 24 hours for tape to cure before washing or prolonged use of vehicle.

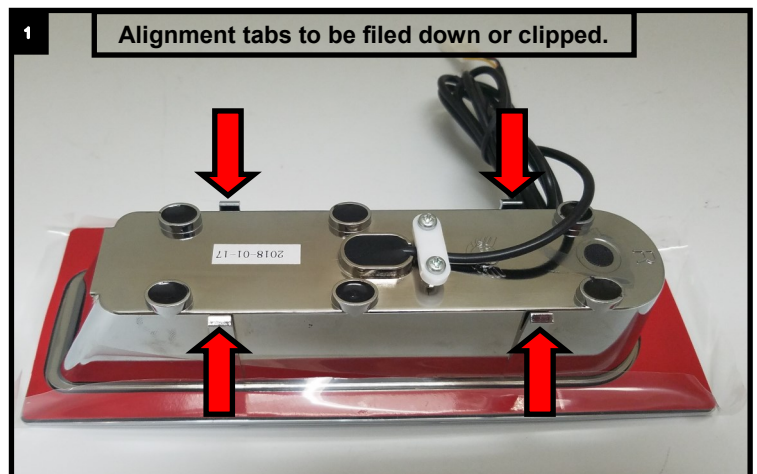

Questions? Email: info@CustomDynamics.com or **Call us at:** 1 (800) 382-1388 **M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST**