


V3 FRAME SLIDERS KIT 2.0

SUZUKI GSX 750/1200 INAZUMA

year of production: ALL


product code: SR165

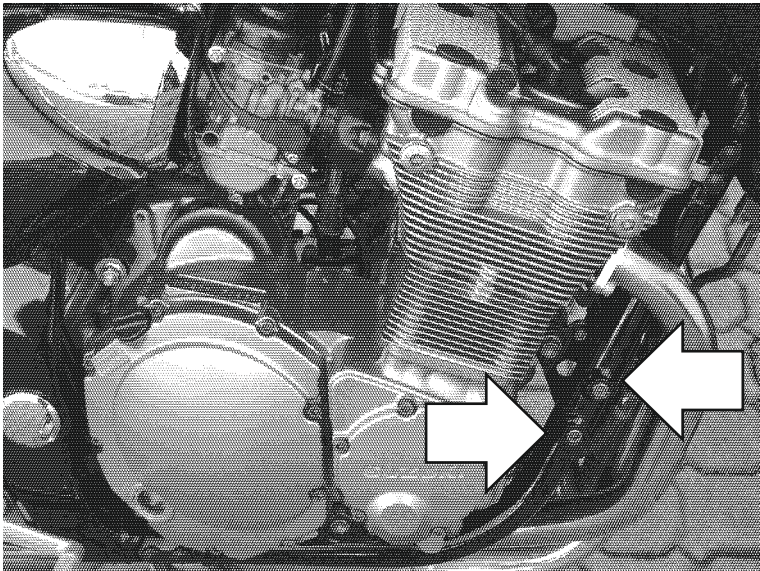

Assembly position
(both sides)

Assembly instructions

1. Remove the fairings on both sides.
 2. Please check the assembly positions on the image above. Remove the original bolts indicated with the arrow on the image above.
 3. Replace the original bolts with the new mounting bolts (parts #7,#8), spacers (parts #9,#10) and metal adapters (parts #6) and put these parts in the right order shown on the assembly scheme on the right page. Put the adapters (parts #6) in the right positions according to the assembly scheme.
 4. Please assemble the fairings.
 7. Assemble the sliders, round cylindrical body, the bolts, steel sleeve and the spacers (parts #1, #2, #3, #4 and #5) according to the drawing on the right page. Put them into the threaded holes in the adapter (part #6).
- We suggest to use the threadlocker (eg. Loctite®) to make sure that the vibrations of the engine do not loosen the bolts.

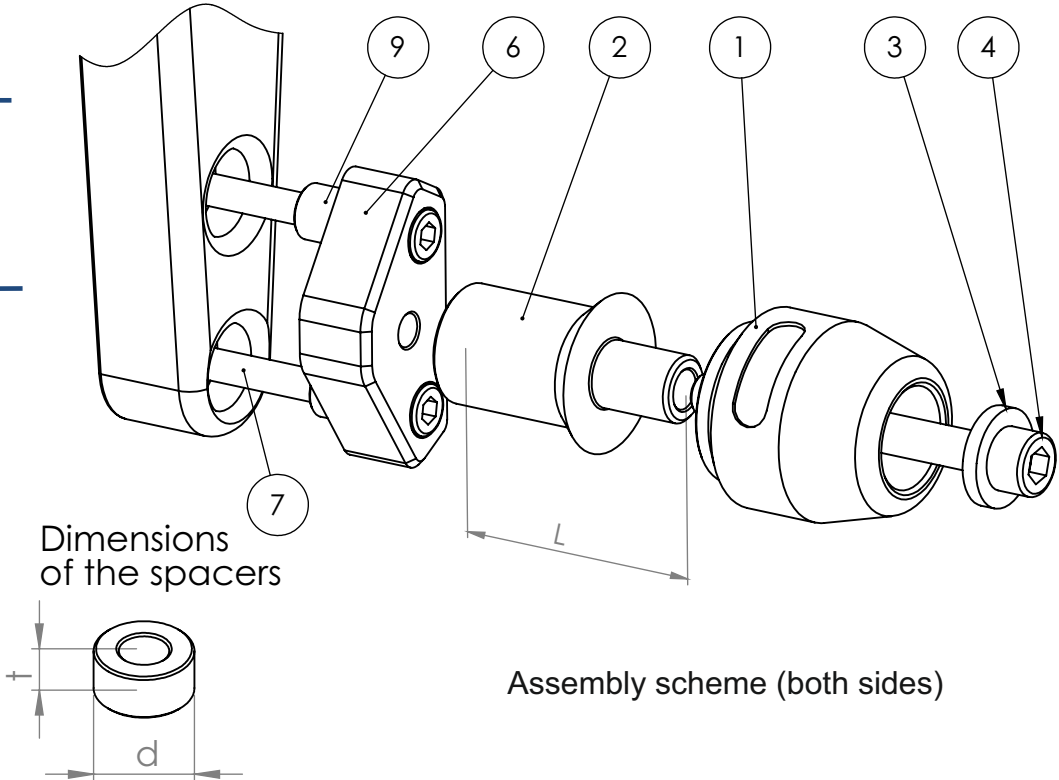

Part #	Part name	Left side (as You sit on the motorbike)	Right side
1	Slider	1 pcs.	1 pcs.
2	Round cylindrical body	L = 80 mm	L = 80 mm
3	Steel sleeve	1 pcs.	1 pcs.
4	Allen bolt (8,8 class)	M10x110 mm	M10x100 mm
5	Spacer	t = 20 mm, d = 10 mm to be put between part #2 and part #6	t = 20 mm, d = 5 mm to be put between part #2 and part #6
6	Adapter	Steel	Steel
7	Mounting bolt 1	M10x80 mm	M10x80 mm
8	Mounting bolt 2	M10x80 mm	M10x80 mm
9	Spacer 1	t = 14 mm, d = 10 mm	t = 14 mm, d = 10 mm
10	Spacer 2	t = 14 mm, d = 14 mm	t = 14 mm, d = 14 mm
11	Nut	-	-
12	Washer	2 pcs. M8 washers to be put under the M8x80 bolt's heads	2 pcs. M8 washers to be put under the M8x80 bolt's heads

Legal note. This product is a professional accessory to be used on the race track. Neither manufacturer, nor Seller take responsibility for any damages occurred despite of using protective accessories. For more information go to vortexracing.com