

## www.GRAVESPORT.com

Fax: 818-902-3821

7629 Densmore Avenue Van Nuys, Ca. 91406

## **EXK-18Z125-FTT Z125 Pro PARTS LIST**

## **Full Titanium Exhaust**

Toll Free: 800-867-6480

## 2017 Kawasaki

•	Head Pipe	1	Springs	2
•	Silencer	1	M6 x 25 Allen Bolt	1
•	Spigot	1	Washer	1
•	Flange	1	Nylock Nut	1
•	Spacer	1	•	

<><INSTALLATION OF THIS PRODUCT SHOULD BE PERFORMED BY A QUALIFIED TECHNICIAN >>>> <>>>>> INSTALLATION SCAREFULLY BEFORE BEGINNING INSTALLATION

- Remove the lower fairing. 1)
- 2) Locate and unplug the O<sup>2</sup> sensor.
- 3) Remove the stock exhaust system.
- 4) Install the spigot and flange to the head. Do not torque the two 12mm nuts yet. Photo 1



Photo 1

- Remove the stock O<sup>2</sup> and install it into the Graves head pipe.
- Install the Graves head pipe into the spigot using the 2 springs supplied. Torque the two 12mm nuts to 15 Nm.
- Remove the stock 4mm allen head bolt behind the right side passenger peg. Photo 2. Using the supplied allen bolt, install it where the stock bolt was removed. Half way for now.



Install the supplied black spacer behind the passenger foot peg mount over the welded square nut. Photo 3 Slide the Graves silencer onto the head pipe, making sure the spacer stays in place. Line up the bracket on the silencer to the 4mm allen you installed half way. Once you have it lined up, finish installing the 4mm allen and snug it up. Not too tight because it's going onto your body panel. Install the supplied spring, washer and nylock nut, using a 4mm allen wrench to hold the allen bolt in place. Then use a 10mm wrench to torque down the nylock nut.

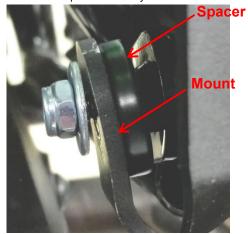


Photo 3

Plug the O<sup>2</sup> sensor back in and reinstall the lower fairing. Check clearances and wipe the exhaust system clean of any fingerprints before starting your motorcycle.

Photo 2