


Please read instructions carefully before installation. We recommend this product be installed by a qualified, and experienced motorcycle technician. If you are unsure of any of the below directions and or your ability to correctly and securely install this product, please contact us or your local dealer for help. Below diagrams show typical installation. Your motorcycle may be different so please use diagrams as a guide. Make sure your motorcycle is clean and free from dirt, road grime, etc. where the product mounts. It is the rider's responsibility to make sure the product is mounted and secure before each use. Loading the bag may result in a change of position. Always check for proper mounting position after loading and before each and every ride.


WARNING: Ensure exhaust gases exit past the saddlebags. Hot parts and exhaust gases can melt saddlebags. Allow a minimum distance of 1" from all hot parts




1. Remove waterproof liner by separating the hook and loop at the opening. Take the included plastic stiffener and place into bag. Insert one end into one of the inner sleeves located on the inside of the bag. Fold back the other end and insert into sleeve on opposite side. Then push down on the stiffener flattening it into the bottom on the bag. Reinstall liner.

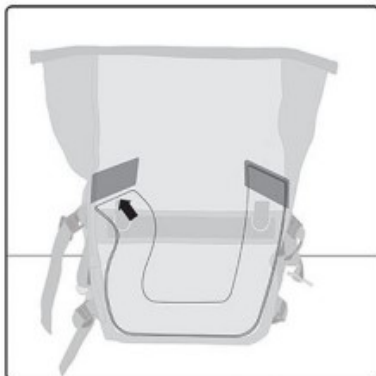


2. Close the top opening by rolling down a minimum of 3 half turns. Pack contents with heavier items at the bottom for better weight distribution and balance

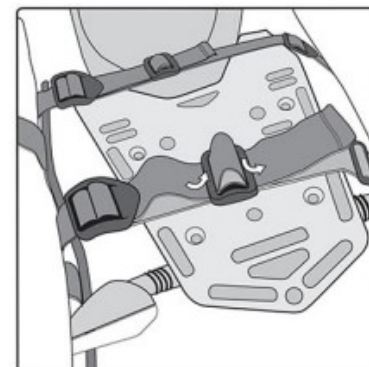


3. Once both saddlebags are in position correctly, pass the end of the straps through the strap keeper as shown to lock them in place. Sometimes it is easier to take the bags off the bike for this part. Not following this step may cause the strap to become loose over certain terrains and load weight.

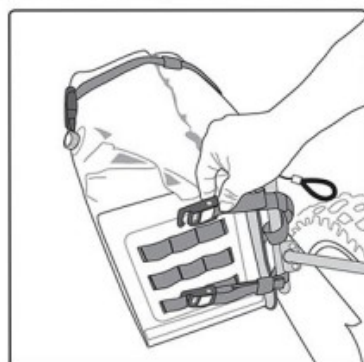

4. Take each of the four Rigg Strap® cam hooks and pass it around the rack 2 times so the strap holds the rack tight. Then attach to a MOLLE loops on the side or front of the bag and pull to secure but do not over tighten. Feed loose straps into the

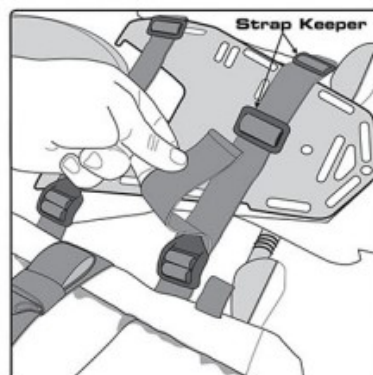

5. Connect both bags with included web strap and position bags over, or if your bike allows, under the seat or rack. Pull all 4 ends to determine the ideal height of the bags. Further adjustment may be necessary once bags are loaded to ensure they do

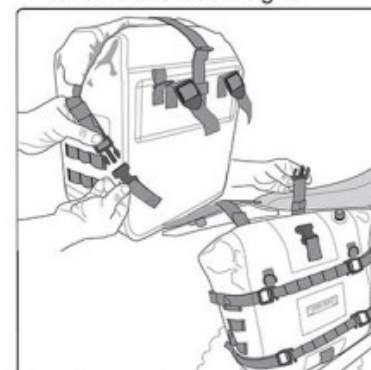

6. Once the top is rolled down tight, connect and secure the two side buckles as shown. Then connect the large center top strap also as shown.

tighten. Feed loose straps into the
provided elastic strap keepers.

bags are loaded to ensure they do
not come into contact with your
exhaust or moving bike part(s).

Warning

Read the installation instructions and make yourself familiar with the process of installing the Rigg Gear product(s) on your vehicle. It is your responsibility to install the product(s) correctly and securely as outlined in these instructions. Rigg Gear products must not be overloaded or over tightened. Max weight limit is 25lbs per bag. Failure to adhere to these warnings may result in, but not limited to, the product becoming detached, becoming tangled in moving parts of the vehicle, unstable vehicle dynamics, reduction in the ability to control the vehicle. The result(s) could lead to serious injury.

Always drive safely. Always wear a helmet and protective apparel.

3518 W Lake Center Drive, Ste. A Santa Ana, CA 92704 USA
Tel (714)850-1811 E-mail: info@nelsonrigg.com www.nelsonrigg.com

