



**Installation Instructions**  
**60-0419LC Yamaha FZ09/MT09/R9**  
**Stator Cover Protector**

1) Attach the skid plate to the Woodcraft cover by bolting it from the inside. **IMPORTANT - USE BLUE THREADLOCKING COMPOUND ON THE THREE SKID PLATE MOUNTING BOLTS.** Coat the threads completely and allow the threadlocking compound to fully set before use.


2) The 60-2500 rubber pad should be adhered to the cover in the pocket that is milled out on the back side for it.

3) Install the Woodcraft cover using the included mounting hardware. Torque for these mounting bolts is about 7 ft-lbs.

**Note:** the OEM retention clips are used on all models. The 04-WA612 washer must be placed between the cover and the 04-SP58B spacer on models FZ09, MT09 **NOT the R9.** **Do not use this washer on the R9.**

4) Yamaha R9 Only – use the 04-SP38B and included hardware 04-BH630Z, 04-WA6Z to space out the back of the lower as shown.

5) Start the motorcycle and inspect for any leaks before riding.

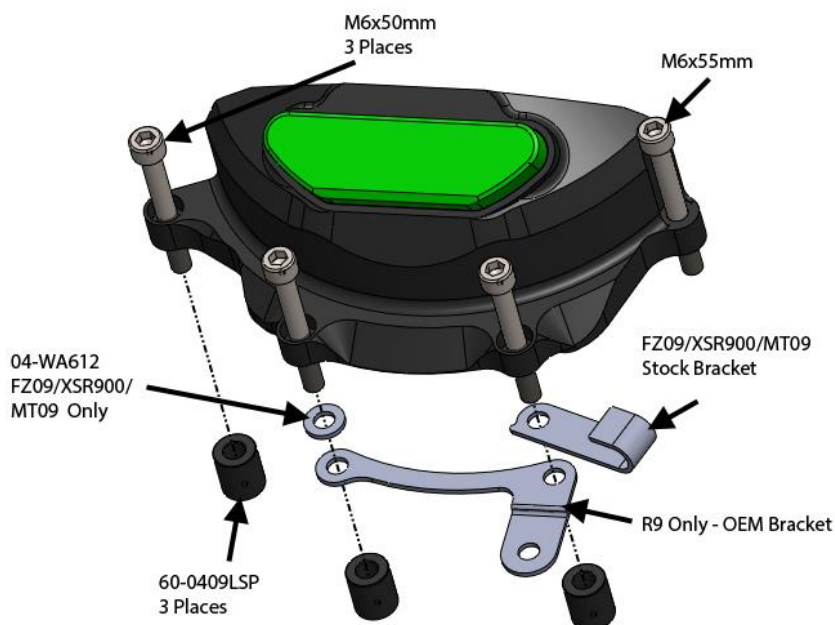

**WARNING**

Installation of Woodcraft Billet Covers involves removal and reinstallation of certain factory components such as fasteners, alternator stators and oil-retention gaskets. **FAILURE TO INSTALL THESE COMPONENTS IN COMPLIANCE WITH ALL SPECIFIC INSTRUCTIONS SUPPLIED**

WITH BILLET COVER KIT, MAY CAUSE OIL LOSS OR DAMAGE TO ENGINE RESULTING IN  
LOSS OF CONTROL OF MOTORCYCLE AND SERIOUS INJURY OR DEATH.