



SIDE COVERS FOR 2020+ INDIAN CHALLENGER/PURSUIT

INCLUDED COMPONENTS:



- Left / Right Side Covers
- Left / Right Cover Trim Templates
- Installation Instructions

TOOLS NEEDED:

- 6mm Hex Tool
- 8mm Hex Tool

QUESTIONS?

- EMAIL:
info@getklocked.com
- CALL: (605) 996.3700

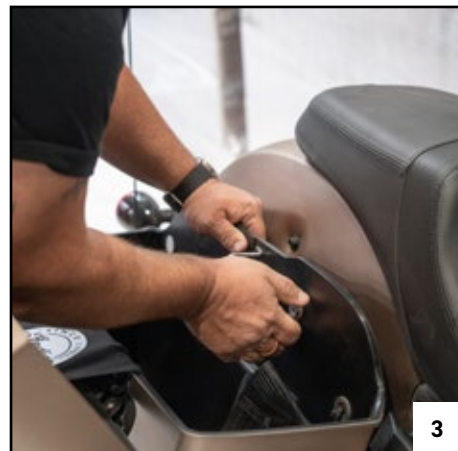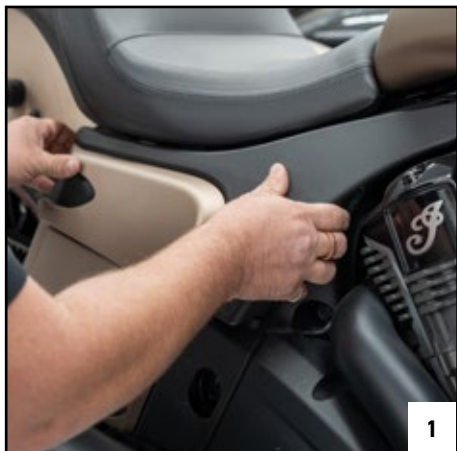


1. If reinstalling passenger peg, use included template to cut clearance hole.
2. Remove Upper Side Cover (**FIG 1**).
3. Unplug saddlebag electrical connection (**FIG 2**).
4. Using 6mm hex tool remove the saddlebag (**FIG 3**).



5. Using 8mm hex tool remove the passenger peg (**FIG 4**).
6. Remove the lower side cover (**FIG 5**).
7. Using 6mm hex tool remove the upper tip over mount cover (**FIG 6**).

INSTRUCTIONS CONTINUED

8. Using 6mm hex tool remove the lower tip over mount cover (**FIG 7**).
9. Using 6mm hex tool install saddlebag (**FIG 8**) and connect electrical plug (**FIG 9**).
10. Install Indian Callenger/Pursuit Side Cover (**FIG 10**).

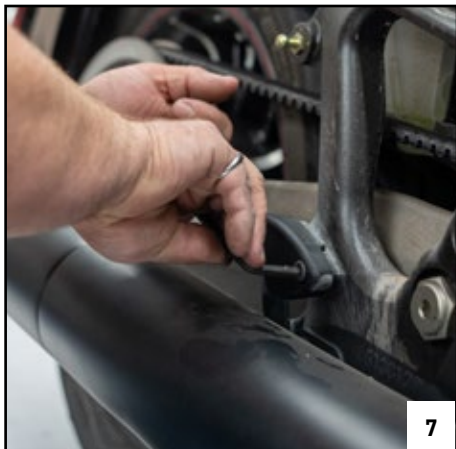


11. Using 8mm hex tool install passenger peg if reinstalling.
12. Repeat steps 1-11 for other side of motorcycle.




NOTE: Full size cut out foot peg templates attached on next page

Left Side Cover

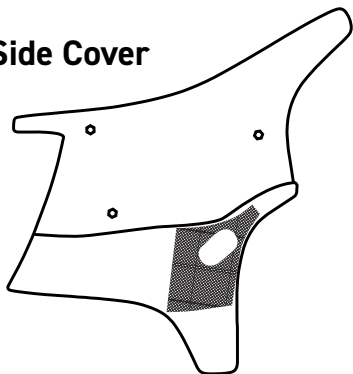

Right Side Cover

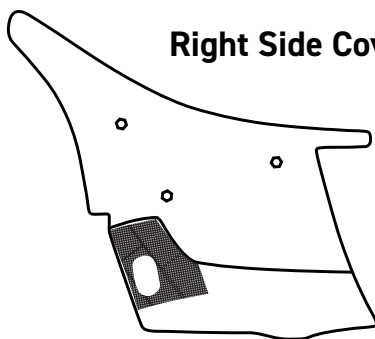

Klock Werks cannot be held responsible for any damage resulting from improper installation performed by any consumer or their dealer.

