


## 50-0345 Honda CBR1000RR-R Frame Slider Installation Instructions (No Cut)

1) These frame sliders will use the forward most engine mounts (photo to right). The process is identical on both sides. Be sure to complete the installation of the base on one side before removing the bolt on the opposite side (only remove one engine mount bolt at a time)

2) The longer base with one of the 12x60mm bolt is installed on the shift side of the motorcycle.

3) Attach the slider base to the motorcycle using the 12mm bolts provided, threading them in place of your motor mount bolt. We recommend using anti seize on these bolts. Torque to about 47 ft-lbs.


4) Slide the plastic slider over the top of the base and secure in place using the 8mm countersunk bolt provided. The bolt passes first through the non-threaded hole and then screws into the threaded hole on the far side of the base. The plastic is undersized on the far side of the slider to act as a locknut for the bolt.

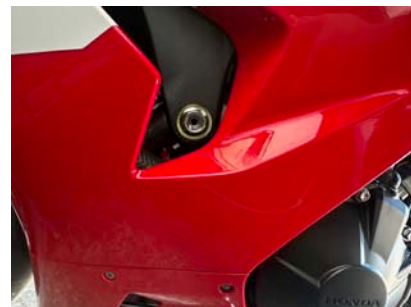

### Right Side



### Left Side

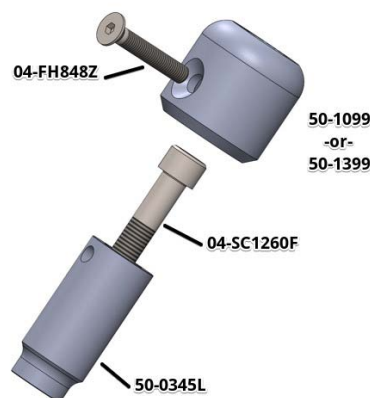

105 Baldwinville Rd. Winchendon, MA 01475 978-297-2977

#### **IMPORTANT**

Tighten all fasteners to factory specification or industry standard. FAILURE TO INSTALL THESE COMPONENTS AND TO PROPERLY TIGHTEN ALL FASTENERS MAY CAUSE DAMAGE TO THE MOTORCYCLE, LOSS OF CONTROL AND SERIOUS INJURY OR DEATH. DO NOT INSTALL OR USE THIS PRODUCT IF YOU ARE UNABLE TO DO SO IN COMPLIANCE WITH ALL INSTRUCTIONS AND WARNING. ALWAYS SEEK THE ASSISTANCE OF A TRAINED PROFESSIONAL TECHNICIAN.