



Custom Dynamics® Mounting Block for 5.75" Softail Headlight Bucket Installation Instructions

We thank you for purchasing the Custom Dynamics® Mounting Block for 5.75" Softail Headlight Bucket. Our products utilize the latest technology and high quality components to ensure you the most reliable service. We offer one of the best warranty programs in the industry and we back our products with excellent customer support, if you have questions before or during installation of this product please call Custom Dynamics® at 1(800)382-1388.

Part Numbers: MOUNT-V2-18ST

Package Contents:

- Headlight Mounting Block (1)
- Instructions (1)


Fitment: 2018-2025 Harley-Davidson® Softail Street Bob (FXBB/FXBBS), 2018-2020 Low Rider (FLXR) and 2020-2024 Softail Standard (FXST).

Compatible with Custom Dynamics® 5.75" Softail Headlight Bucket: CD-18ST-BUCKET (**sold separately**).



Installation:

1. Remove all necessary parts to disconnect the negative battery cable from the battery.
2. Remove the OEM Headlight assembly, headlight mount and unplug headlight connector. Save OEM mounting bolt for re-use.
3. Mount the new Custom Dynamics® or ProBEAM® Headlight Mounting Block using the OEM mounting bolt. The Headlight Mounting Block should be installed with the flat side facing the front of the motorcycle to maintain the OEM headlight position. Shown in **Figure 1**. **Note: The Custom Dynamics® Headlight Mounting Block can be installed in the opposite direction to extend the headlight forward 1-3/8" if needed.**

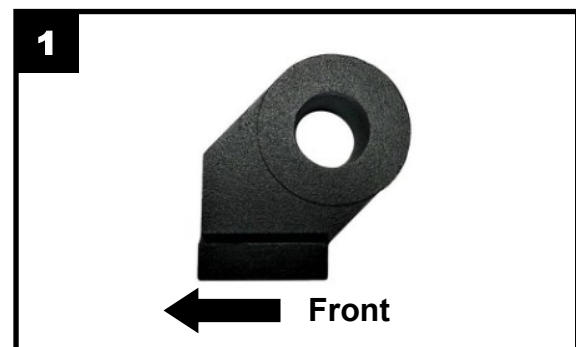

4. Install the new Custom Dynamics® Headlight Bucket and LED Headlight (**sold separately**) to the Custom Dynamics® Headlight Mounting Block. Refer to the Headlight Bucket and Headlight instructions for installation.
5. Reconnect the negative battery cable to the battery and reinstall all necessary parts.
6. Test the new Custom Dynamics® or ProBEAM® LED Headlight for proper operation.



ATTENTION

Please read all Information below before Installation

Warning: Disconnect negative battery cable from battery; refer to owner's manual. Failure to do so may result in electrical shock, injury, or fire. Secure negative battery cable away from positive side of battery and all other positive voltage sources on the motorcycle.

Safety First: Always wear appropriate safety gear including safety glasses when performing any electrical work. It is highly recommended that safety glasses be worn throughout this installation process. Be sure the motorcycle is on level surface, secure and cool.

Questions? Email: info@CustomDynamics.com or Call us at: 1 (800) 382-1388 M-TH 8:30AM-5:30PM / FR 9:30AM-5:30PM EST