

BMW S1000R '21-

M O U N T I N G I N S T R U C T I O N S

REF 20887

CARENABRÍS NG SPORT / WINDSHIELD NG SPORT



20 min



1 Person



EASY



**FITS BIKES
WITH ORIGINAL SUPPORTS**

TORX
T25




Nº 11



ALLEN
Nº 3

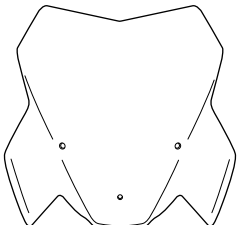

ID	PIEZA/PART	DESCRIPCIÓN	DESCRIPTION	QTY	REF
1		Cúpula Sport	Sport screen	1	10852W/H/N/F/AM3
2		Tornillo especial M5x9 Long Hexagonal 14 (rosca int M5x10)	M5x9 special screw Hexagonal lenght 14 (rosca int M5x10)	1	TORNI-EC----597
3		Silentblock Ø12xØ6x9	Ø12xØ6x9 Silentblock	3	AROPASACABLES-3
4		Casquillo con valona Ø12xØ6,8x7,3	Ø12xØ6,8x7,3 Bush with flange	3	CASQUI-1A---750
5		Tornillo Allen M5x16 Ø11 ISO 7380	M5x16 Ø11 ISO 7380 Allen screw	3	TORNI-I7380-493
6		Tapón tornillo M5 ISO 7380	M5 ISO 7380 screw cap	3	TAPON-----85


* Algunos componentes se suministran montados.
Some components are supplied assembled.

BMW S1000R '21-

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG


1

**DISASSEMBLY
DESMONTAJE**

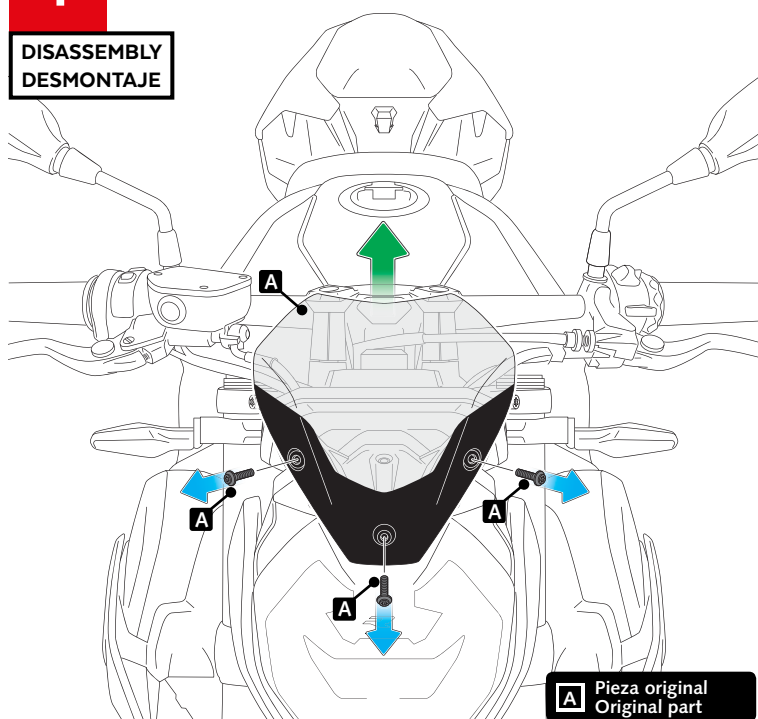



2

**ASSEMBLY
MONTAJE**

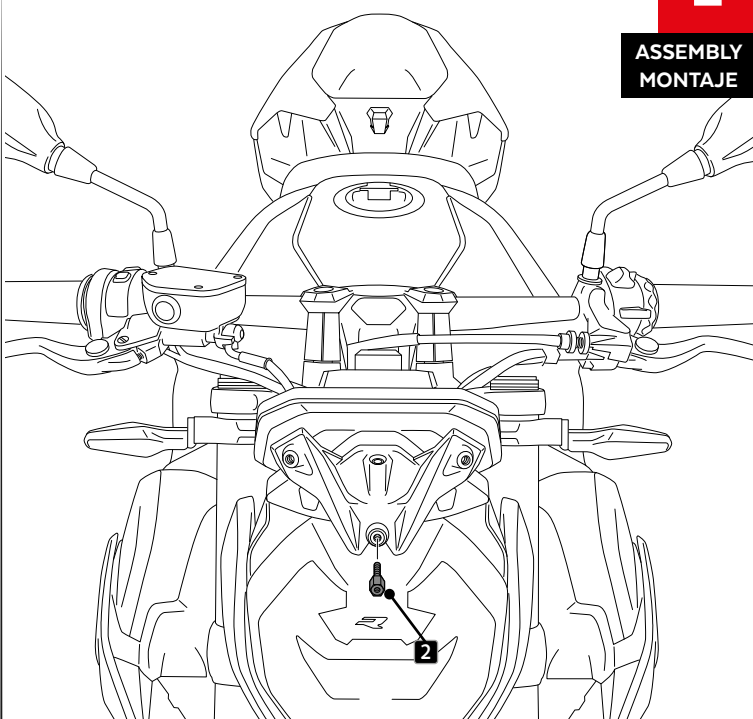

3

**ASSEMBLY
MONTAJE**

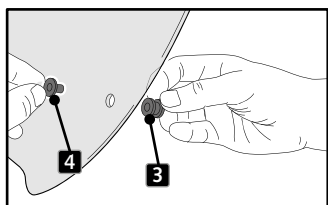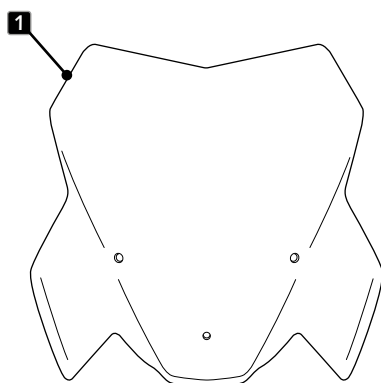

4

**ASSEMBLY
MONTAJE**

