

INSTRUCTION SHEET



FLARE® WINDSHIELD FOR BMW

FOR 2014-2018 BMW R 1200 RT AND 2018-2020 BMW R 1250 RT

QUESTIONS?

EMAIL: info@getklocked.com




CALL: (605) 996.3700

INCLUDED IN BOX:

(1) Flare® Windshield (1) Instruction Sheet

TOOLS NEEDED:

+ T25 Torx Driver

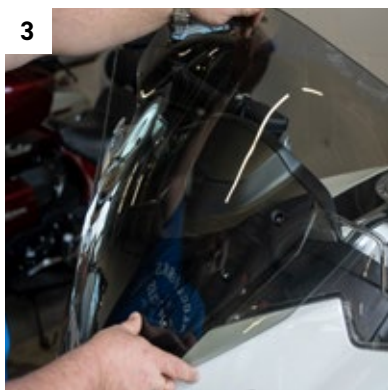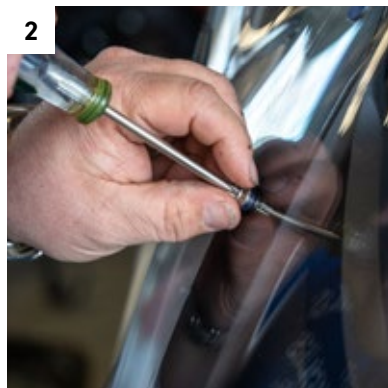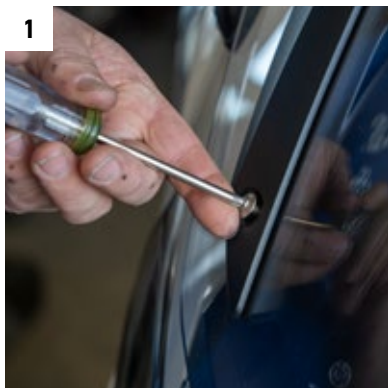

1. Protect all painted surfaces.
2. Remove both screws and trim from the right hand side (**FIG 1**).
3. Remove both screws and trim from the left hand side.
4. Remove 2 shoulder screws and remove windshield (**FIG 2**).
5. Install Flare® Windshield and reinstall 2 shoulder screws (**FIG 3**). Torque to factory recommendation.
6. Loosely install left trim and screws.
7. Loosely install right trim and screws (**FIG 4**).
8. Torque four trim screws to factory recommendation.
9. Clean with Shine Werks and enjoy!

WARNING! Using Loctite® or any type of thread locker on hardware will result in breakdown of the Polycarbonate and cause cracking.

Klock Werks cannot be held responsible for any damage resulting from improper installation performed by any consumer or their dealer.

U.S. Pat. No. D586,274; D632,235; D586,275; D633,017; D626,046; D633,018 Pat. 001050165-0001, 001050165-0002, 001050165-0003 APO No. 324093, 324094, 325192