


## INSTALL INSTRUCTIONS FOR FLARE® HAND GUARDS FOR H-D® MOTORCYCLES



1. Using a 1/2" socket, remove the mirror from one side of the motorcycle (FIG 1).
2. Install mirror stud through one star/tooth washer, through the Flare® Hand Guard bracket, through the second star/tooth washer and back into the lever body (FIG 2).
3. Reinstall the factory nut and washer and tighten. While tightening hold the mirror and hand guard to prevent rotation (FIG 3).
4. Repeat steps 1-3 for the remaining side of the motorcycle.
5. To clean, use Shine Werks, our cleaner formulated specifically for Flare® Windshields and safe for use on Hand Guards, along with a clean microfiber towel. Mild soapy water is also acceptable.

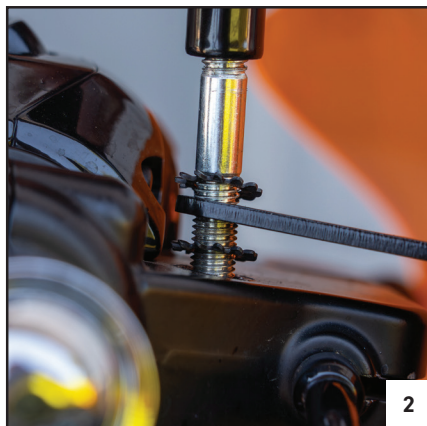

SCAN FOR A FULL  
VIDEO TUTORIAL!

**WARNING!** Using Loctite® or any type of thread locker on hardware will result in breakdown of the Polycarbonate and cause cracking.

Klock Werks cannot be held responsible for any damage resulting from improper installation performed by any consumer or their dealer.

U.S. Pat. No. D586,274; D632,235; D586,275; D633,017; D626,046; D633,018 Pat. 001050165-0001, 001050165-0002, 001050165-0003 APO No. 324093, 324094, 325192