

HOW TO PATCH A TUBE

● Step 1



Use the scuffer to lightly scuff the area around the puncture. The area to be covered by the patch should feel rough to the touch.

● Step 2




Apply rubber cement onto the roughened surface. Gently work the rubber cement into the tube, spreading it evenly and scraping off any excess.

● Step 3



Remove the foil backing from the patch without touching the sticky surface.

● Step 4

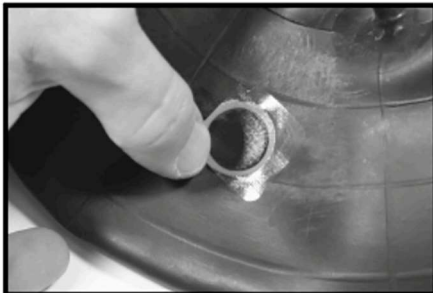

Apply the patch (sticky side down) centered over the puncture and press firmly, especially around the edges.

● Step 5



Remove the clear plastic film and wait for the rubber cement to fully dry before reinflating your tube to the recommended pressure.



HOW TO USE