The most up to date instructions can be downloaded from the product page at altrider.com, under the instructions tab.

Dear Rider,

Thank you for choosing AltRider! Whether a seasoned world adventurer or a first time ADV-Newbie, we welcome you to the AltRider experience. You can install your new product with the utmost confidence. AltRider designs, tests, and manufactures all of its products here in the United States. We are proud to do what we do, and honored to present to you the product of our labors.

Enjoy it, show it off, and most of all, RIDE IT!

Venture On,
Jeremy LeBreton

ALTRIDER
venture on
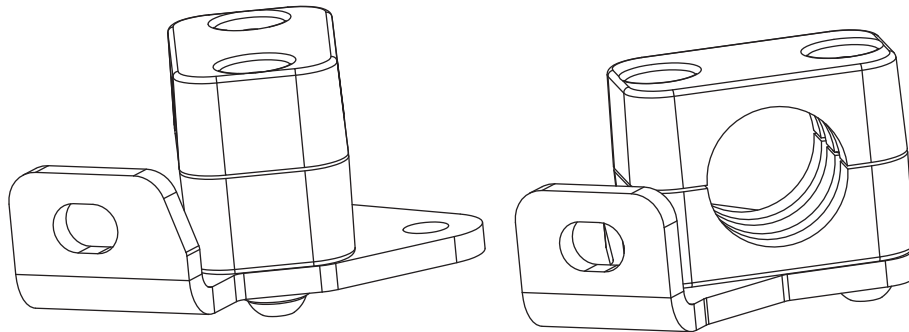
AltRider Bracket Adapter Kit
BMW R1200 GS Adventure 2014+
R114-9-1000

Package Contents:
- Brackets
- Hardware Kit
- Instructions

AltRider LLC

Global
mailing: 4000 Aurora Ave N Ste 100
Seattle, WA 98103 USA
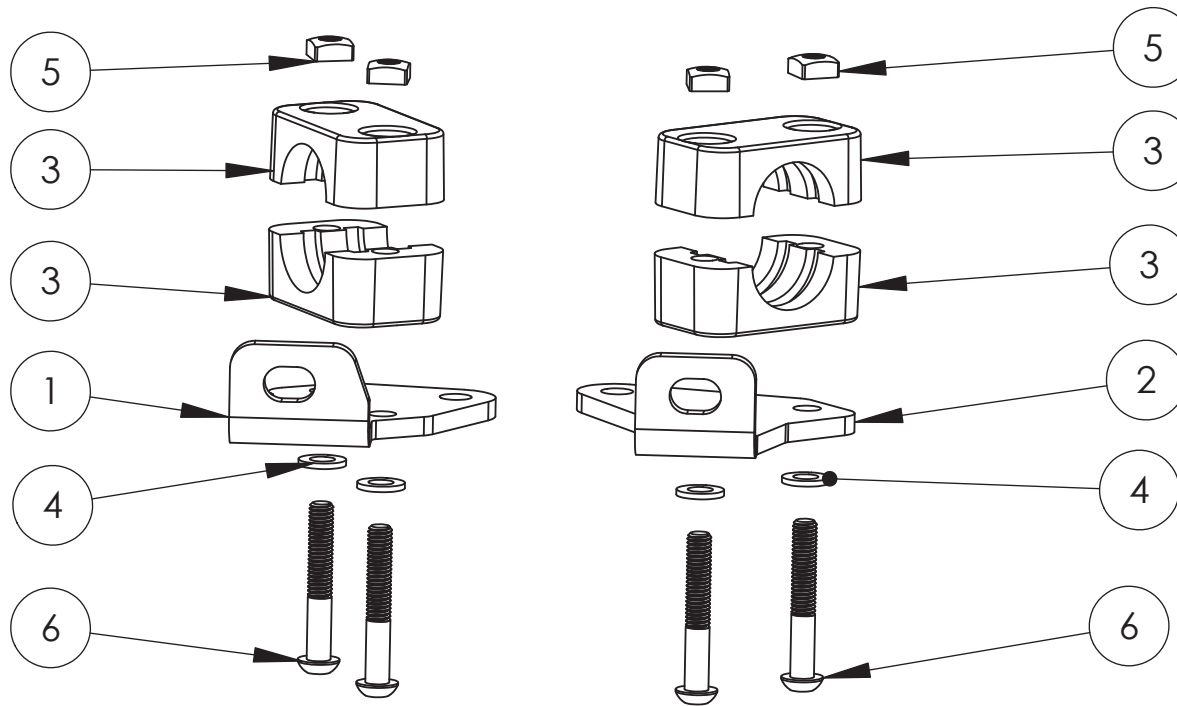phone: 206-922-3618
email: info@altrider.com
web: www.altrider.com

Europe
mailing: AltRider EU
Heliumstraat 230
2718 RS Zoetermeer
The Netherlands

email: info@altrider.eu

REV 1.0

MADE IN THE USA

ALTRIDER
venture on

Kit:

① Left bracket

② Right bracket

③ (qty 2) clamp half

④ (qty 4) M6 washer

⑤ (qty 4) M6 square nut (inserted in clamp half)

⑥ (qty 4) M6 x 40 button head screw

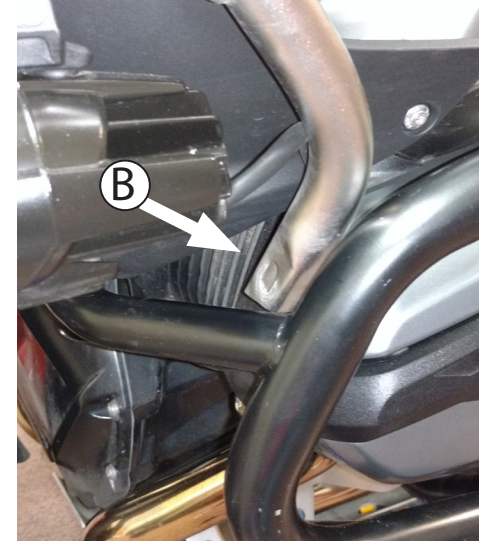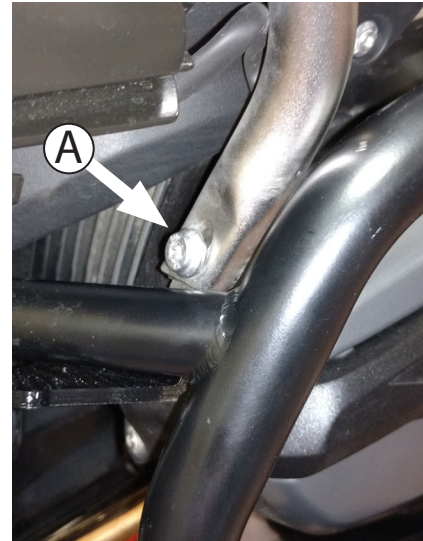**Required Tools:**

① 4mm hex allen bit

② T40 torx bit

③ Extension

④ Small Ratchet

⑤ Large ratchet

⑥ Thread locker

ALTRIDER
venture on

① *Complete all following steps for both the right and left side.*
Remove BMW lower bars and install AltRider lower bars.
Use T40 torx tool and loosen the upper mount of the BMW upper bars.

② (A) Use T40 tool to remove the upper connector screw.
(B) Remove the internal connector.

③ (A) Attach the connector to the AltRider bracket. Apply a drop of thread
locker to the the OEM T40 screw, tighten to 15 Nm.
(B) Insert connector back into the upper bars, attach with OEM T45 screw.
Leave loose for now.

Additional hole for auxiliary light mount.
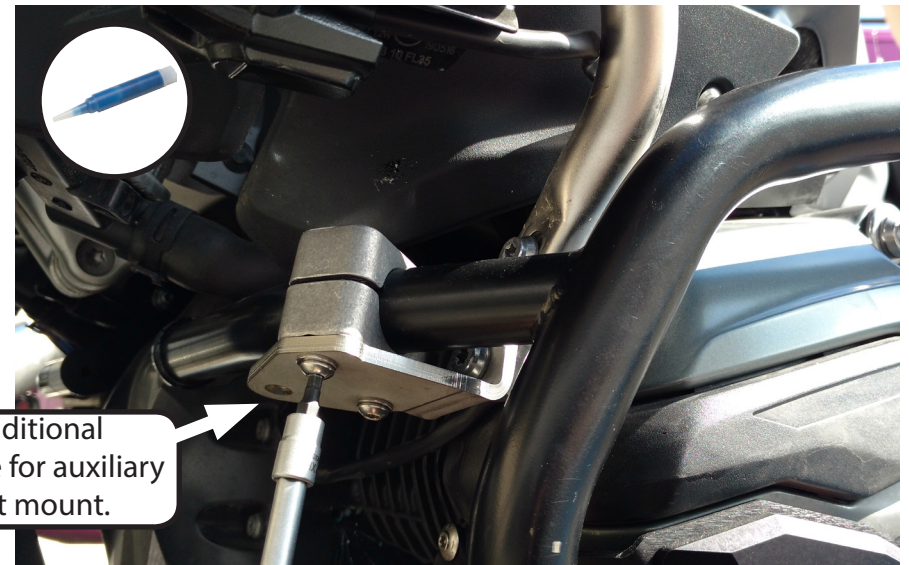
④ Arrange the clamp halves, with one half with embedded square nut on the
top. Add a drop of loctite to each M6 x 40 screw and with washer insert from
below. Adjust for best fit. Tighten all T40 scresws(including upper mount) to
15 Nm. Then tighten the M6 screws to 7.5Nm.

CONGRATULATIONS!

You've completed your installation. If at any point you have questions about your installation or have any feed back for us, we'd love to hear it. A downloadable version of these instructions can be found at our web site. www.AltRider.com

After 5 hours of riding, or 100 miles, check all the fasteners on the assembly to ensure they are tightened to spec.

Global Office:

email: info@AltRider.com
phone: +1 206-922-3618
address: 4000 Aurora Ave N
            Ste 100
            Seattle, WA 98103

Europe Office:

email: info@AltRider.eu
address: AltRider EU
            Heliumstraat 230
            2718 RS Zoetermeer
            The Netherlands

ALTRIDER
venture on