




DIRECTIONS (ENGLISH) :

Step 1. Read all the instructions, Dangers & Warnings carefully before using this tool. Save this information for future reference.

Let Tread Doctor warm up for 20mins. Use Included Stand to Rest Unit On. You can trim your tire right on your M/C or ATV. Note: Unit will smoke a small amount on initial warm-up.



Step 2. Slice into worn edge of knobby and scoop Tread Doctor Knobby Cutting Tool upward as edge of blade meets the end of the knobby.

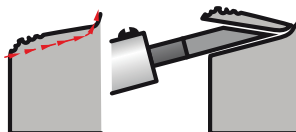

Slice off the least amount possible in order to get the most life from your tire as possible.

Repeat as necessary or after every ride. Sharpen with stone or grinding wheel.

Tread Doctor offers replacement blades for your unit, if needed. Please go to www.hardlineproducts.com/motorcycle to order.

See hardlineproducts.com/support for more info and how-to video.

DIRECTIONS (FRENCH) :

Étape 1. Lisez toutes les instructions, les dangers et mises en garde avant d'utiliser cet outil. Enregistrer ces informations pour référence future.

Laissez-Tread Docteur chauffer pendant 20 minutes. Utilisez livré avec un support to Rest appareil. Vous pouvez découper votre droite pneu sur votre M / C ou en VTT.

Remarque: L'appareil fumer une petite quantité lors de la première warm-up.


Étape 2. Trancher en bord de porter nouveaux et Knobby Docteur scoop Tread outil de coupe vers le haut que le bord de la lame se réunit à la fin de l'nouveaux.

Essayez de découper le caoutchouc peu que possible de faire un bord carré, votre pneu durera encore plus longtemps. La pratique rend parfait!

Répéter au besoin ou après chaque randonnée.

Docteur bande de roulement offre lames de rechange pour votre appareil si nécessaire. cliquez sur hardlineproducts.com / moto pour commander

Voir hardlineproducts.com/support pour plus d'info et comment à la vidéo.

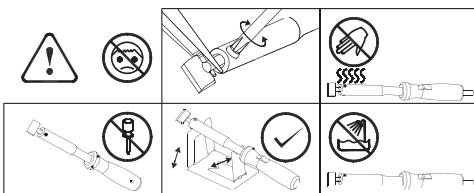

Do you have a great product idea? We can help bring your product to market. Call or e-mail Hardline Products for details.

**677 Cochran Street Simi Valley, CA 93065
805-581-4700 ph. 805-581-0022 fax.
sales@hardlineproducts.com
www.hardlineproducts.com**