


USER GUIDE

DW06-PRO

 **Bluetooth**® Helmet Headset

By **SENA**

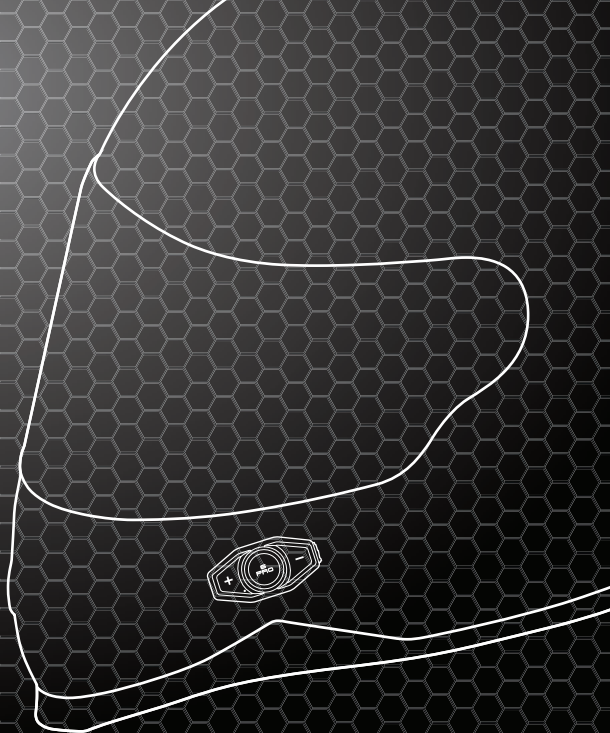


CONTENTS

1	GETTING STARTED.....	4	4	STEREO MUSIC	14
1.1	Button Operation.....	4		4.1 Bluetooth Stereo Music	14
1.2	Powering On and Off.....	4		4.2 Music Sharing	15
1.3	Charging.....	5			
1.4	Checking the Battery Level.....	5		5 INTERCOM.....	16
1.5	Volume Adjustment	6		5.1 Two-way Intercom	16
1.6	Softwares.....	6		5.2 Multi-Way Intercom.....	17
2	PAIRING THE HEADSET WITH BLUETOOTH DEVICES	7		6 THREE-WAY CONFERENCE PHONE CALL WITH INTERCOM PARTICIPANT	20
2.1	Mobile Phone Pairing - Mobile Phone, Bluetooth Stereo Device.....	7		7 GROUP INTERCOM	20
2.2	Second Mobile Phone Pairing - Second Mobile Phone, GPS, and SR10	8		8 UNIVERSAL INTERCOM.....	21
2.3	Advanced Selective Pairing - A2DP Stereo or Handsfree.....	9		9 FM RADIO	22
2.4	Intercom Pairing	11		9.1 FM Radio On/Off	22
3	MOBILE PHONE, GPS	12		9.2 Preset Stations.....	22
3.1	Mobile Phone Call Making and Answering.....	12		9.3 Seek and Save	23
3.2	Speed Dialing.....	13		9.4 Scan and Save	23
3.3	GPS Navigation	14		9.5 Temporary Preset	23
				9.6 FM Sharing	24
				9.7 Region Selection	24

10	FUNCTION PRIORITY	25
11	CONFIGURATION SETTING	26
	11.1 Headset Configuration Setting.....	26
	11.2 Software Configuration Setting	27
12	FIRMWARE UPGRADE.....	34
13	TROUBLESHOOTING	34
	13.1 Intercom Failure.....	34
	13.2 Intercom Reconnection	35
	13.3 Factory Reset	35
	13.4 Fault Reset.....	35

1 GETTING STARTED

1.1 Button Operation

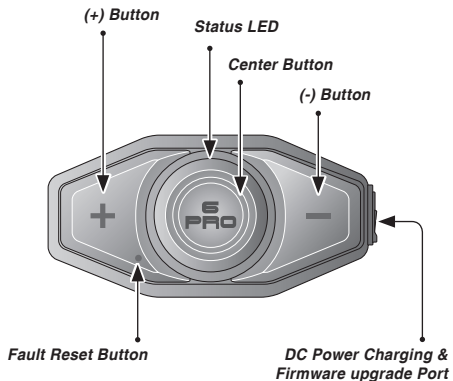


1.2 Powering On and Off

To power on the headset, press and hold the Center Button and the (+) Button for 1 second. To power off the headset, tap the Center Button and the (+) Button.

1.3 Charging

The headset can be charged using many common methods via the supplied USB power & data cable. The LED turns red while the headset is charging and turns blue when it is fully charged. Depending upon the charging method, the headset will be fully charged in about 2.5 hours.

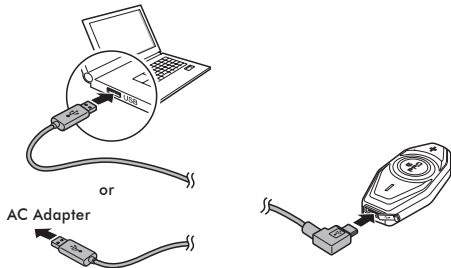

1.4 Checking the Battery Level

1.4.1 LED Indicator

When the headset is powering on, the red LED flashes rapidly indicating the battery level.

4 flashes = High, 70~100%

3 flashes = Medium, 30~70%

2 flashes = Low, 0~30%

1.4.2 Voice Prompt Indicator

When you power on the headset, keep pressing the Center Button and the (+) Button simultaneously for about 3 seconds until you hear high tone triple beeps. Then you will hear a voice prompt indicating the battery level is high, medium, or low.

1.5 Volume Adjustment

You can raise or lower the volume by tapping the (+) Button or the (-) Button. Volume is set and maintained independently at different levels for each audio source, even when the headset is rebooted.

1.6 Softwares

1.6.1 Using the Cycle Gear Device Manager

The Cycle Gear Device Manager allows you to upgrade the firmware and configure the device settings directly from your PC. It is available for both Windows and Mac. For more information on downloading the Device Manager, please visit oem.sena.com/cyclegear.

1.6.2 Using the Sena Utility App

The Sena Utility App allows you to configure device settings and read the User's Guide and the Quick Start Guide. Download the Sena Utility App for Android phone or iPhone from Google Play or App Store.

2 PAIRING THE HEADSET WITH BLUETOOTH DEVICES

You can pair the headset with Bluetooth mobile phones, Bluetooth stereo devices such as MP3, SR10, or GPS, and with other Sena Bluetooth headsets. The pairing operation is required only once for each Bluetooth device. The headset can also be paired with up to three other Sena headsets.

2.1 Mobile Phone Pairing - Mobile Phone, Bluetooth Stereo Device

1. To enter the configuration menu, press and hold the Center Button for 10 seconds until you hear the voice prompt, **“Configuration menu”**.
2. By tapping the (+) Button, you will hear the voice prompt, **“Phone pairing”**.
3. Search for Bluetooth devices on your mobile phone. Select the SEDICI DWO6-PRO in the list of the devices detected on the mobile phone.
4. If your mobile phone asks for a PIN, enter 0000.

2.2 Second Mobile Phone Pairing - Second Mobile Phone, GPS, and SR10

1. To enter the configuration menu, press and hold the Center Button for 10 seconds until you hear the voice prompt, **“Configuration menu”**.
2. Tap the (+) Button until you hear a voice prompt, **“Second mobile phone pairing”**.
3. Search for Bluetooth devices on your mobile phone. Select the SEDICI DWO6-PRO in the list of the devices detected on the mobile phone.
4. If your mobile phone asks for a PIN, enter 0000.

Note:

1. *If you have two audio (A2DP) devices connected to your headset then the audio from one device will interrupt the audio from the other device. For example, if you are playing music from the primary mobile phone, then it can be interrupted by playing music from the secondary mobile phone and vice versa.*
2. *You have to use a motorcycle specific GPS, which transmits turn-by-turn voice instructions to the headset by Bluetooth.*
3. *The Sena SR10 is a Bluetooth two-way radio adapter for group communication, and uses Hands-Free-Profile. The incoming audio from the two-way radio via SR10 is heard in the background while having an intercom conversation or a mobile phone call.*

4. *The GPS navigation or a radar detector could be connected to the SR10 by wire. The GPS voice instruction or the radar detector alarm is also heard in the background via SR10 while having an intercom conversation or a phone call. Please refer to the SR10 User's Guide for details.*

2.3 Advanced Selective Pairing - A2DP Stereo or Handsfree

Phone Pairing allows the headset to establish two Bluetooth profiles: Hands-Free or A2DP Stereo. Advanced Selective Pairing allows the headset to separate the profiles to enable connection with two devices.

2.3.1 A2DP Stereo Music Only

1. To enter the configuration menu, press and hold the Center Button for 10 seconds until you hear the voice prompt, “**Configuration menu**”.
2. Tap the (+) Button until you hear a voice prompt, “**Media selective pairing**”.
3. Search for Bluetooth devices on your mobile phone. Select the SEDICI DWO6-PRO in the list of the devices detected on the mobile phone.
4. If your mobile phone asks for a PIN, enter 0000.

2.3.2 HFP for Phone Call Only

1. To enter the configuration menu, press and hold the Center Button for 10 seconds until you hear the voice prompt, “**Configuration menu**”.
2. Tap the (+) Button until you hear a voice prompt, “**Phone selective pairing**”.
3. Search for Bluetooth devices on your mobile phone. Select the SEDICI DWO6-PRO in the list of the devices detected on the mobile phone.
4. If your mobile phone asks for a PIN, enter 0000.


2.4 Intercom Pairing

2.4.1 Pairing with Other Headsets for Intercom Conversation

The headset can be paired with up to three other headsets for Bluetooth intercom conversation.

1. Press and hold the Center Button of the **headset A and B** for 5 seconds until red LEDs of the both units start to flash rapidly.
2. Simply tap the Center Button of any one of the **two headsets A and B**, and wait until the LEDs of both headsets turn to blue and intercom connection is automatically established.
3. You can make other pairings between **headsets A and C**, and between **headsets A and D** by following the same procedure as above.

4. The intercom pairing queue is '**Last-Come, First-Served**'. If a headset has multiple paired headsets for intercom conversations, the last paired headset is set as **first intercom friend**. The previous intercom friend becomes **second intercom friend**, and **third intercom friend**.

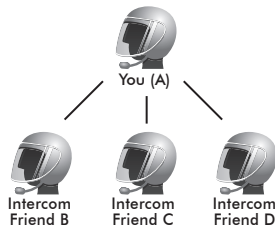

3 MOBILE PHONE, GPS

3.1 Mobile Phone Call Making and Answering

1. To answer a call, tap the Center Button to answer the call.
2. You can also answer the incoming call by loudly speaking any word of your choice if VOX Phone is enabled, unless you are connected to intercom.
3. To end a call, press and hold the Center Button for 2 seconds until you hear a mid-tone single beep.
4. To reject a call, press and hold the Center Button for 2 seconds until you hear a beep while the phone is ringing.
5. To make a call with voice dialer, press and hold the Center Button for 3 seconds in stand-by mode to activate the voice dialer of your mobile phone.

3.2 Speed Dialing

1. Press and hold the (+) Button for 3 seconds and you will hear a mid-tone single beep and a voice prompt, **“Speed dial”**.
2. Tap the (+) Button or the (-) Button to navigate between the menus. You will hear prompts for each menu item.
3. Tap the Center Button to select a voice menu among the followings:
 - (1) **Last number redial**
 - (2) **Speed dial 1**
 - (3) **Speed dial 2**
 - (4) **Speed dial 3**
 - (5) **Cancel**
4. After selecting the last number redial menu, **“Last number redial”**. Then, to redial the last phone call number, tap the Center Button.
5. To call one of the speed dials, tap the (+) Button or the (-) Button to navigate between the menus until you hear a voice prompt, **“Speed dial (#)”**. Then, tap the Center Button.
6. If you want to exit the speed dial immediately, tap the (+) Button or the (-) Button until you hear a voice prompt, **“Cancel”**, and tap the Center Button.

3.3 GPS Navigation

3.3.1 GPS Pairing

1. Press and hold the Center Button for 10 seconds until you will hear a voice prompt saying “**Configuration menu**”.
2. Tap the (+) Button and you will hear the voice prompt saying “**GPS pairing**”.
3. Search for Bluetooth devices on the GPS navigation. Select the SEDICI DWO6 PRO in the list of the devices detected on the GPS.
4. Enter 0000 for the PIN.

Note:

When Audio Multitasking is enabled, if you pair your GPS device via GPS Pairing, its instructions will not interrupt your intercom conversations, but will overlay with them.

4 STEREO MUSIC

4.1 Bluetooth Stereo Music

1. To play or pause music, press and hold the Center Button for 1 second until you hear a double beep.
2. To adjust the volume, tap the (+) Button or the (-) Button.
3. To track forward or track back, press and hold the (+) Button or the (-) Button for 1 second until you hear a beep.

4.2 Music Sharing

You can start sharing music with an intercom friend using Bluetooth stereo music during a two-way intercom conversation. When you terminate music sharing, you can go back to the intercom conversation. To start or terminate sharing music, press and hold the Center Button for 1 second during an intercom conversation until you hear a double beep.

Note:

- 1. Both you and your intercom friend can remotely control music playback such as track forward and track back.*
- 2. Music sharing will be paused when you are using your mobile phone or listening to GPS instructions.*
- 3. Music sharing will be terminated if the headset starts a multi-way intercom conference.*
- 4. When Audio Multitasking is enabled, if an intercom call is made when you are listening to music, music sharing will not work.*

5 INTERCOM

5.1 Two-way Intercom

5.1.1 Starting Two-way Intercom

You can start an intercom conversation with one of any intercom friends by tapping the Center Button: single tap to intercom with the ***first intercom friend***, double tap to intercom with the ***second intercom friend***, and triple tap to intercom with the ***third intercom friend***.

5.1.2 Ending Two-way Intercom


You can end an intercom conversation with one of any intercom friends by tapping the Center Button. Tap the Center Button once to intercom with the ***first intercom friend***, tap the Center Button twice to intercom with the ***second intercom friend***, and tap the Center Button three times to intercom with the ***third intercom friend***.

5.2 Multi-Way Intercom


Multi-way intercom enables conference-call-style conversations with up to three intercom friends at the same time. While multi-way intercom is in progress, mobile phone connection is temporarily disconnected. However, as soon as multi-way intercom terminates, the mobile phone connection will be reestablished.

5.2.1 Starting Three-way Intercom


1. You (A) need to be paired with two other friends (B & C) for three-way conference intercom.

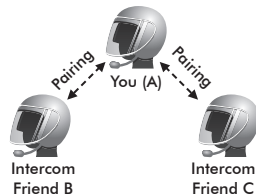

2. Start an intercom conversation with one of the two friends in your intercom group.

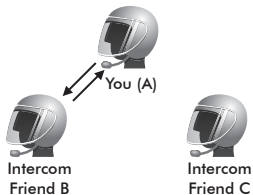


3. You (A) can call the second intercom friend (C) by double tapping the Center Button, or the second intercom friend (C) may join the intercom by making an intercom call to you (A).

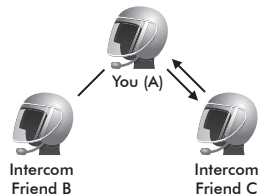

5.2.2 Starting Four-way Intercom

With three intercom friends connected, a new participant (D) can make it a four-way intercom conference by making an intercom call to either (B) or (C).

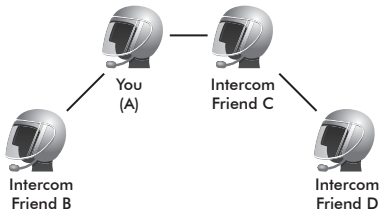

5.2.3 Ending Multi-Way Intercom

You can completely terminate the conference intercom or just disconnect an intercom connection with one of your active intercom friends.

1. Press and hold the Center Button for 3 seconds until you hear a beep to terminate all intercom connections.
2. Tap the Center Button to disconnect from your first intercom friend. Double tap the Center Button to disconnect from your second intercom friend.

Note:

Multiple headsets are connected during multi-way intercom. With various signals interfering each other, the intercom distance of multi-way intercom is relatively shorter than that of two-way intercom.

6 THREE-WAY CONFERENCE PHONE CALL WITH INTERCOM PARTICIPANT

You can have a three-way conference phone call by adding an intercom friend to the mobile phone conversation.

1. During a mobile phone call, tap the Center Button to invite one of your intercom friends to the conversation.
2. To disconnect the intercom during a conference phone call, tap the Center Button.
3. To disconnect the mobile phone call during a conference phone call, press and hold the Center Button for 2 seconds.

7 GROUP INTERCOM

Group Intercom allows you to instantly create a multi-way conference intercom with three other most recently paired headsets.

1. Go through intercom pairing with up to three headsets you want to have Group Intercom with.
2. Tap the (+) Button and (-) Button to begin Group Intercom. The LED will flash blue and red simultaneously.
3. To terminate Group Intercom, press and hold the Center Button for 3 seconds during Group Intercom.

8 UNIVERSAL INTERCOM


Universal Intercom allows you to have intercom conversations with users of non-Sena Bluetooth headsets. Non-Sena Bluetooth headsets can be connected to the Sena Bluetooth headset if they support the Bluetooth Hands-Free Profile (HFP). You can pair the headset with only one non-Sena headset at a time. The intercom distance depends on the performance of the Bluetooth headset to which it's connected. When a non-Sena Bluetooth headset is paired with the headset, if another Bluetooth device is paired via Second Mobile Phone Pairing, it will be disconnected.

Note:


Some non-Sena headsets may not support multi-way Universal Intercom.

1. Press and hold the Center Button for 10 seconds to enter the configuration menu. Tap the (+) Button or the (-) Button until you hear a voice prompt, **“Universal intercom pairing”**. Tap the Center Button to enter into Universal Intercom Pairing mode and you will hear multiple beeps.
2. Put the non-Sena Bluetooth headset in Pairing Mode. The headset will automatically pair with a non-Sena Bluetooth headset.

3. You can have a two-way intercom or multi-way intercom communication with up to three intercom friends using non-Sena headset.

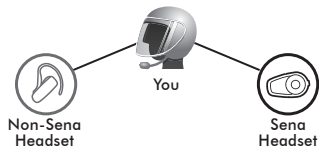

Three-way Universal Intercom

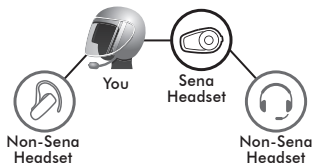

Four-way Universal Intercom

9 FM RADIO

9.1 FM Radio On/Off

To turn on or off the FM radio, press and hold the (-) Button for 1 second until you hear a mid-tone double beep sound.

9.2 Preset Stations

You can listen to preset stations while listening to the FM radio. Press and hold the Center Button for 1 second to go upward to your next saved preset station.

9.3 Seek and Save

1. Double tap the (+) Button or the (-) Button to search up or down the station dial.
2. To save the current station, press and hold the Center Button for 3 seconds until you hear a voice prompt, **“Preset (#)”**.
3. Tap the (+) Button or the (-) Button, in order to select which preset number you want for that specific station. (You can save up to 10 preset stations.)
4. To save the current station, press and hold the (+) Button for 1 second. You will then hear a voice prompt, **“Save preset (#)”**.
5. To delete the saved station in the preset number, press and hold the (-) Button for 1 second. You will then hear a voice prompt, **“Delete preset (#)”**.

9.4 Scan and Save

1. Press and hold the (+) Button for 1 second.
2. The Sena tuner pauses at each station it finds for 8 seconds before moving to the next.
3. To save a station while scanning frequencies, tap the Center Button at that station. You will hear a voice prompt, **“Save preset (#)”**. The station will be saved as the next preset number.

9.5 Temporary Preset

The Temporary Station Preset feature automatically finds and saves the nearest 10 radio stations without changing your existing preset stations.

1. Tap the (+) Button 3 times to automatically scan for 10 temporary preset stations.
2. The temporary preset stations will be cleared when the headset is powered off.

9.6 FM Sharing

You can listen to the radio during the intercom conversation. To start FM sharing, press and hold the (-) Button for 1 second during the intercom conversation. During FM sharing, you can move to the next preset station and you or your friend on the intercom can change frequencies. If either person changes the frequency, the other will listen to the same frequency. To terminate FM sharing, press and hold the (-) Button for 1 second or end the intercom call.

Note:

1. FM sharing will be terminated if the headset starts a multi-way intercom conference.
2. When Audio Multitasking is enabled, if an intercom call is made while you are listening to the FM radio, FM sharing will not work.

9.7 Region Selection

You can select the proper FM frequency region from the Cycle Gear Device Manager. With the region setting, you may optimize the seek function to avoid unnecessary frequency ranges.

Region	Frequency Range	Step
Worldwide	76.0 ~ 108.0 MHz	± 100 kHz
Americas	87.5 ~ 107.9 MHz	± 200 kHz
Asia	87.5 ~ 108.0 MHz	± 100 kHz
Australia	87.5 ~ 107.9 MHz	± 200 kHz
Europe	87.5 ~ 108.0 MHz	± 100 kHz
Japan	76.0 ~ 95.0 MHz	± 100 kHz

10 FUNCTION PRIORITY

The headset operates in the following order of priority:

- (highest)** Mobile phone
- Intercom/FM sharing
- Music sharing by Bluetooth
stereo music
- (lowest)** FM radio

A lower priority function is always interrupted by a higher priority function.

Note:

If you select music as the audio source priority, the order of priority will change as below:

- (highest)** Mobile phone
- Bluetooth stereo music
- Intercom/FM sharing
- Music sharing by Bluetooth
stereo music
- (lowest)** FM radio

11 CONFIGURATION SETTING

11.1 Headset Configuration Setting

1. To enter configuration menu, press and hold the Center Button for 10 seconds until you will also hear a voice prompt, **“Configuration menu”**.
2. Tap the (+) Button or the (-) Button to navigate between the menus. You will hear voice prompts for each menu item.
3. You can execute the command by tapping the Center Button.

Configuration Menu	Tap Center Button
Phone Pairing	None
Second Mobile Phone Pairing	None
GPS Pairing	None
Phone Selective Pairing	None
Media Selective Pairing	None
Delete All Pairings	Execute
Remote Control Pairing	Execute
Universal Intercom Pairing	Execute
Factory Reset	Execute
Exit Configuration	Execute

11.1.1 Remote Control Pairing

You can remotely control the headset using Sena Remote Control devices (sold separately).

1. Turn on the headset and the Remote Control device.
2. Execute Remote Control Pairing.
3. Enter pairing mode in the Remote Control device. The headset will automatically connect with the Remote Control device in pairing mode.

11.2 Software Configuration Setting

You can change the settings of the headset through the Cycle Gear Device Manager or the Sena Utility APP.

11.2.1 Speed Dial

Assign phone numbers for speed dialing to make a phone call quickly.

11.2.2 Audio Source Priority (Default: Intercom)

Audio Source Priority allows you to select the priority between the intercom and music (which includes GPS app instructions and message notifications) from a smartphone. If the intercom is selected as the audio source priority, your music will be interrupted during an intercom conversation. If music is selected as the audio source priority, intercom conversations will be interrupted while your music is heard.

Note:

Audio Source Priority is active only when Audio Multitasking is disabled.

11.2.3 Audio Boost (Default: Disable)

Enabling Audio Boost increases the overall maximum volume. Disabling Audio Boost reduces the overall maximum volume, but delivers more balanced sound.

11.2.4 VOX Phone (Default: Enable)

If this feature is enabled, you can answer incoming calls by voice. When you hear a ringtone for an incoming call, you can answer the phone by saying a word such as “**Hello**” loudly or by blowing air into the microphone. VOX phone is temporarily disabled if you are connected to intercom. If this feature is disabled, you have to tap the Center Button to answer an incoming call.

11.2.5 VOX Intercom (Default: Disable)

If this feature is enabled, you can initiate an intercom conversation with the last connected intercom friend by voice. When you want to start intercom, say a word such as **“Hello”** loudly or blow air into the microphone. If you start an intercom conversation by voice, the intercom terminates automatically when you and your intercom friend remain silent for 20 seconds. However, if you manually start an intercom conversation by tapping the Center Button, you have to terminate the intercom conversation manually. However, if you start intercom by voice and end it manually by tapping the Center Button, you will not be able to start intercom by voice temporarily. In this case, you have to tap the Center Button to restart the intercom. This is to prevent repeated unintentional intercom connections by strong wind noise. After rebooting the headset, you can start intercom by voice again.

11.2.6 HD Voice (Default: Disable)

HD Voice allows you to communicate in high-definition during phone calls. This feature increases the quality so that the audio will be crisp and clear during phone call conversations. If this feature is enabled, incoming phone calls will interrupt intercom conversations and audio from the SR10 will not be heard during intercom conversations. Three-Way Conference Phone Call with Intercom Participant will not be available if HD Voice is enabled.

Note:

- 1. Refer to the manufacturer of your Bluetooth device that will be connected to the headset to see if it supports HD Voice.*
- 2. HD Voice is active only when Audio Multitasking is disabled.*

11.2.7 HD Intercom (Default: Enable)

HD Intercom enhances the two-way intercom audio from normal quality to HD quality. HD Intercom will become temporarily disabled when you enter into a multi way intercom. If this feature is disabled, the two-way intercom audio will change to normal quality.

Note:

- 1. The intercom distance of HD Intercom is relatively shorter than that of normal intercom.*
- 2. HD intercom is active only when Audio Multitasking is disabled.*

11.2.8 VOX Sensitivity (Default: 3)

VOX sensitivity can be adjusted depending on your riding environment. Level 5 is the highest sensitivity setting and 1 is the lowest.

11.2.9 Voice Prompts (Default: Enable)

You can disable voice prompts by software configuration settings, but the following voice prompts are always on.

- Headset configuration settings menu, battery level indicator, speed dial, FM radio functions

11.2.10 RDS AF Setting (Default: Disable)

Radio Data System (RDS) Alternative

Frequency (AF) Setting allows a receiver to re-tune to the second frequency location when the first signal becomes too weak. With RDS AF enabled on the receiver, a radio station with more than one frequency can be used.

11.2.11 FM Station Guide (Default: Enable)

When FM Station Guide is enabled, FM station frequencies are given by voice prompts as you select preset stations. When FM Station Guide is disabled, the voice prompts on FM station frequencies will not be given as you select preset stations.

11.2.12 Sidetone (Default: Disable)

Sidetone is audible feedback of your own voice. It helps you to naturally speak at the correct level according to varying helmet noise conditions. If this feature is enabled, you can hear what you are speaking during an intercom conversation or a phone call.

11.2.13 Advanced Noise Control™ (Default: Enable)

When Advanced Noise Control is enabled, the background noise is reduced during an intercom conversation. When it is disabled, the background noise is mixed with your voice during intercom.

11.2.14 Audio Multitasking™ (Default: Disable)

Audio Multitasking allows you to hear the audio from two features simultaneously. When Audio Multitasking is enabled, phone calls, GPS instructions and intercom conversations can be overlaid with audio from the FM radio, music or GPS app instructions from a smartphone in the background with reduced volume. Increasing or decreasing the volume of the audio in the foreground will also increase or decrease the volume of the overlaid audio in the background. The volume of the foreground audio can be adjusted using the headset. How much background audio that is heard can be adjusted using the Sena Utility App. HD Intercom, HD Voice, and Audio Source Priority become disabled temporarily when Audio Multitasking is enabled.

Model	Foreground*		
	Phone	GPS	Intercom
DWO6-Pro	<input type="radio"/> ^A	<input type="radio"/> ^A	
		<input type="radio"/>	<input type="radio"/>
			<input type="radio"/> ^B
		<input type="radio"/> ^C	

Model	Background**	
	FM Radio	Music or Smart Navi
DWO6-Pro		
	<input type="radio"/>	<input type="radio"/> ^B
	<input type="radio"/> ^C	<input type="radio"/>

Foreground and Background Combination Table

* Two audio sources in the foreground can be heard simultaneously with the same volume level.

** Only one background source can be heard at a time while listening to an audio source in the foreground.

- A. GPS instructions can be heard during phone calls and the volume level of both audio sources can be adjusted using the headset.
- B. GPS app directions will be heard in the background during intercom conversations.
- C. The FM radio will be heard in the background when GPS instructions are heard.

Note:

- 1. Audio Multitasking will be activated during two-way intercom conversations with a headset that also supports this feature.*
- 2. When Audio Multitasking is disabled, the background audio source will return to its independent volume level.*
- 3. Audio Multitasking has limited usage for iOS devices.*
- 4. For Audio Multitasking to work properly, you need to power the headset off and on. Please restart the headset.*
- 5. Some GPS devices may not support this feature.*

11.2.15 Background Volume (Default: Level 5)

The Background Volume can be adjustable only when the Audio Multitasking turns on. Level 9 is the highest volume and 0 is the lowest.

12 FIRMWARE UPGRADE

The headset supports firmware upgrades. You can update the firmware using the Cycle Gear Device Manager. Please visit the website at oem.sena.com/cyclegear to check the latest software downloads.

13 TROUBLESHOOTING

13.1 Intercom Failure

When you try to start an intercom conversation with an intercom friend who is unavailable within range or already having a conference intercom with other riders or a mobile phone call, you will hear a low tone double beep signifying an intercom busy signal. In this case, you have to try again later.

13.2 Intercom Reconnection

If your intercom friend goes out of range while having an intercom conversation, you may hear static noise and eventually the intercom will be disconnected. In this case, the headset automatically tries to reconnect the intercom every 8 seconds and you will hear high tone double beeps until the intercom is reestablished. If you do not want to make a reconnection, tap the Center Button to stop the attempt.

13.3 Factory Reset

If you want to restore the headset to factory default settings, use the Factory Reset in the configuration menu. The headset automatically restores the default settings and turns off.

13.4 Fault Reset

When the headset is not working properly or is in faulty status for any reason, you may reset by pushing the pin-hole reset button below the (+) Button. Insert a paper clip into the reset pin-hole and press the reset button for a second with light pressure. The headset will be switched off. Restart the system and try again. This will not restore the headset to factory default settings.



Fault Reset Button

 **Bluetooth**[®] Helmet Headset