

POWER COMMANDER 6

Installation Guide for: PC6-17020

Model Coverage: 2010-2011 Kawasaki KX450F

PARTS LIST



- | | | | |
|---|--------------------|---|------------------------|
| 1 | POWER COMMANDER 6 | 2 | POWER COMMANDER DECALS |
| 1 | INSTALLATION GUIDE | 2 | VELCRO STRIPS |
| 1 | USB CABLE | 1 | ALCOHOL SWAB |
| 2 | DYNOJET DECALS | | |


**PLEASE READ ALL DIRECTIONS BEFORE STARTING INSTALLATION.
THE IGNITION MUST BE TURNED OFF BEFORE INSTALLATION.**



IPC6-17020.01



INPUT ACCESSORY GUIDE

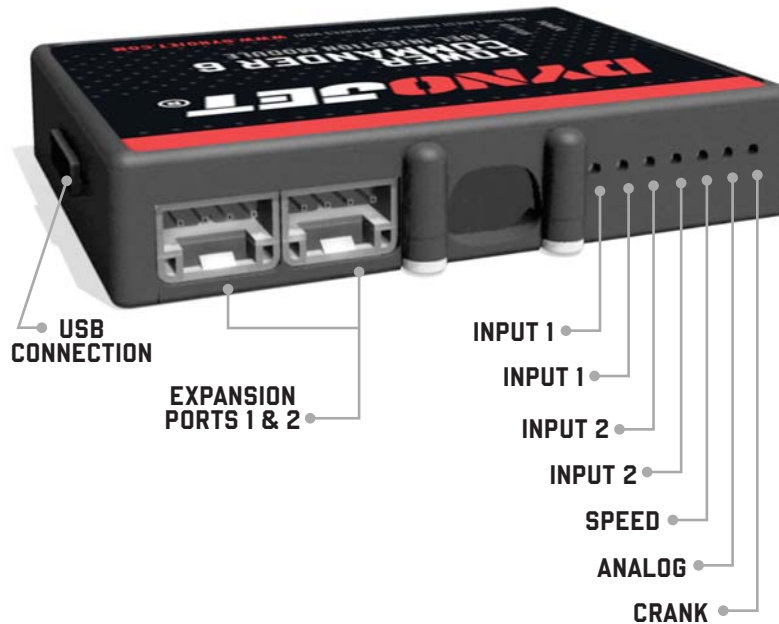

OPTIONAL ACCESSORY INPUTS

- Map** (Input 1 or 2) The PC6 has the ability to hold 2 different base maps. You can switch on the fly between these two base maps when you hook up a switch to the MAP inputs. You can use any open/close type switch. The polarity of the wires is not important.
- Shifter** (Input 1 or 2) Used for clutch-less full throttle upshifts. Insert the wires from the Dynojet quick shifter into either Input 1 or Input 2. The polarity of the wires is not important. Set to Input 2 by default.
- Speed** If your application has a speed sensor then you can tap into the signal side of the sensor and run a wire into this input. This will allow you to calculate gear position in the Control Center Software. Once gear position is setup you can alter your map based on gear position and setup gear dependent kill times when using a quick shifter.
- Analog** This input is for a 0-5v signal such as engine temp, boost, etc. Once this input is established you can alter your fuel curve based on this input in the Power Core software.
- Launch** You can connect a wire to either Input 1 or Input 2 and then the other end to a switch. This switch when engaged (continuity) will only allow the RPM to be raised to a certain limit (set in the software). When released, you will have full RPM.

WIRE CONNECTIONS

To input wires into the PC6 first remove the rubber plug on the backside of the unit and loosen the screw for the corresponding input. Using a 22-24 gauge wire, strip about 10mm from its end. Push the wire into the hole of the PC6 until it stops and then tighten the screw. Make sure to reinstall the rubber plug.

NOTE: If you tin the wires with solder it will make inserting them easier.



INSTALLING THE POWER COMMANDER 6



- 1 Remove the seat, fuel tank, and front number plate.
- 2 Using the supplied Velcro strips, attach the PC6 module to the back side of the number plate.

Clean surfaces with the supplied alcohol swab prior to applying the Velcro adhesive.

- 3 Route the PC6 harness to the left side of the frame following along the throttle cable towards the bike's throttle body.



- 4 Unplug the stock wiring harness from the Fuel Injector.




- 5 Plug the PC6 in-line of the bike's Fuel Injector and the stock wiring harness.


- 6 Unplug the stock Throttle Position Sensor connectors.

This is a 3-pin connector located just rear of the throttle body. It is accessed easiest from the right side of the bike.

This image was taken from the left side of the bike looking between the frame and the air box.

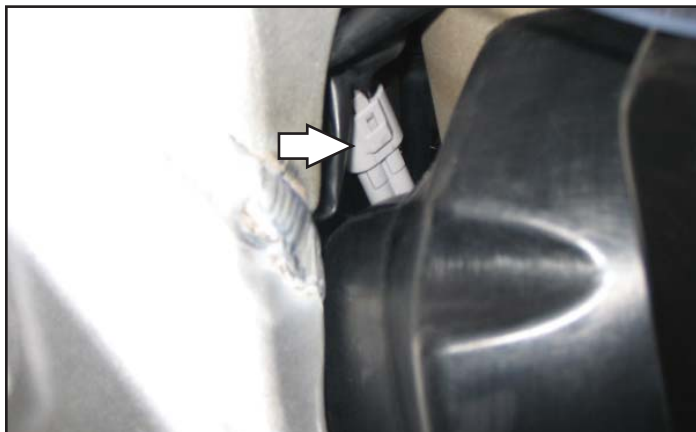

- 7 Plug the **PC6** wiring harness in-line of the stock TPS connectors.

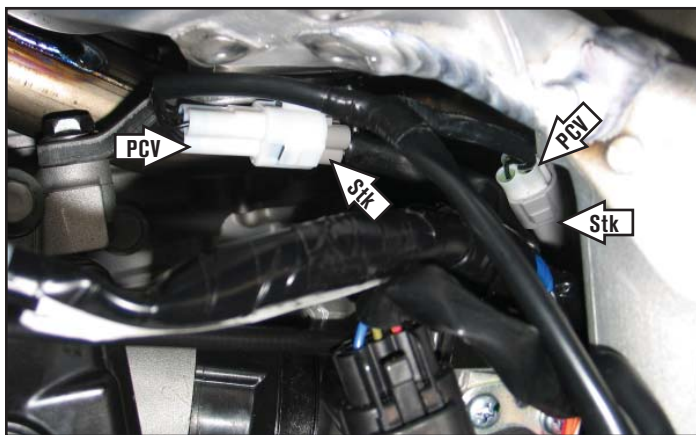

- 8 Remove the upper bolt that holds the bike's Ignition Coil to the frame. Use this bolt to secure the PC6 ground wire with the small ring lug at this location on the frame.

- 9 Reinstall the fuel tank, seat, and number plate.

Make sure the fuel tank does not pinch the PC6 wiring harness.

Download the latest map files from our web site at dynojet.com/tunes.





**PUSH
THE
LIMIT**

2191 MENDENHALL DRIVE, NORTH LAS VEGAS, NV 89081 - 800-992-4993 - DYNOJET.COM
© 2010-2022 DYNOJET RESEARCH ALL RIGHTS RESERVED